

 


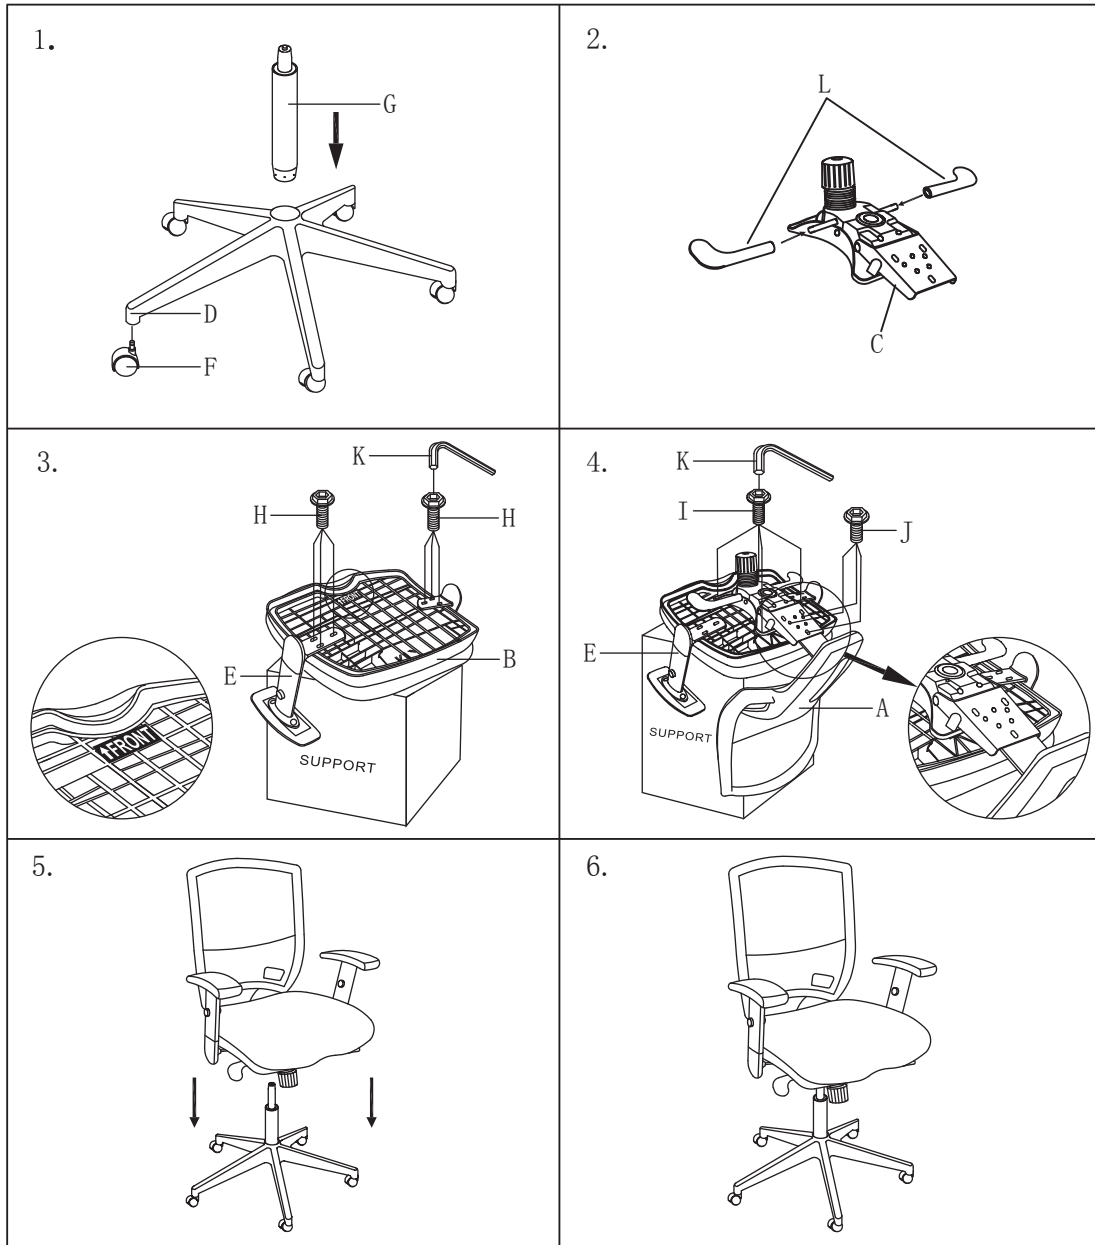











ASSEMBLY INSTRUCTIONS

 

<p>A.</p>  <p>1 PC</p>	<p>E.</p>  <p>1 PAIR</p>	<p>I.</p>  <p>4 PCS</p>
<p>B.</p>  <p>1 PC</p>	<p>F.</p>  <p>5 PCS</p>	<p>J.</p>  <p>3 PCS</p>
<p>C.</p>  <p>1 PC</p>	<p>G.</p>  <p>1 PC</p>	<p>K.</p>  <p>1 PC</p>
<p>D.</p>  <p>1 PC</p>	<p>H.</p>  <p>6 PCS</p>	<p>L.</p>  <p>1 PAIR</p>

Model: EP42ME10B
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ USSCo,
 1 Parkway North, Suite 100, Deerfield, IL 60015 ©2011 USSCo
 Made in/ Hecho en/ Fabriqué en China
 Product support and parts: 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces




OPERATING INSTRUCTIONS

Model: EP42ME10B

Arm Width

To adjust the arm width, loosen the screws under the arm support and adjust to desired placement on the chair.

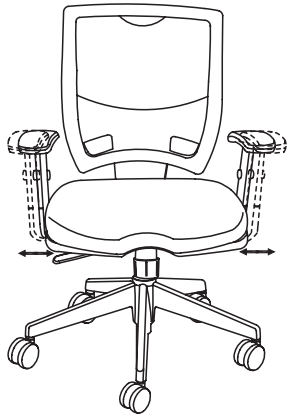


Arm Height (Armrest set sold separately)

To adjust the armrest height, lift the lever on the outside of the arm support and move the arm up or down. Release the lever to lock.




Seat Height

To raise the seat height, stand up from the chair while lifting the lever "A" under the right side of the seat. To lower the seat height, lift the lever "A" while sitting in the chair.

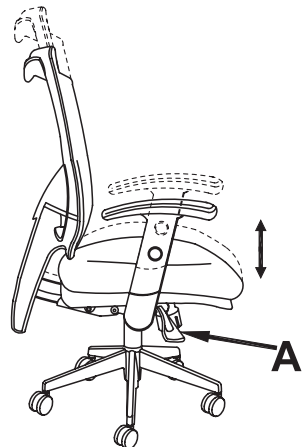

Multiple Stop Tilt Lock and Upright Tilt Lock

To unlock the chair from an upright or reclined position, lift the lever "B" on the right side of the chair. To lock the angle of recline push down on the "B" lever.

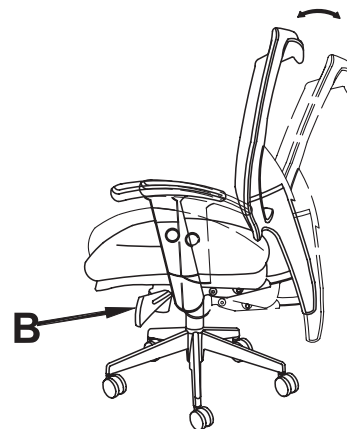

Back height

Hold the back and lift it to a proper position. When it is lifted to the highest position, the back will drop down to the lowest position automatically.

