
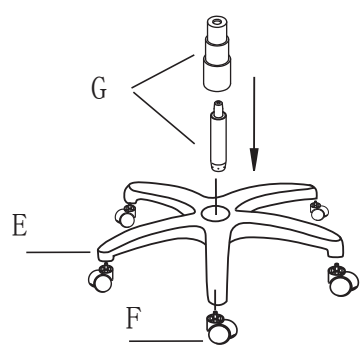


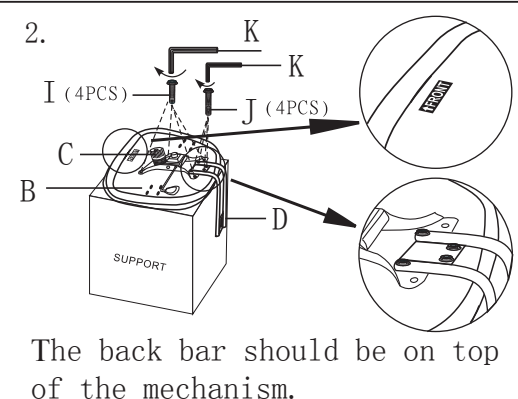


# ASSEMBLY INSTRUCTIONS

Compatible with IN49AKA10B/IN49AKB10B armrests


1. 


2. 



 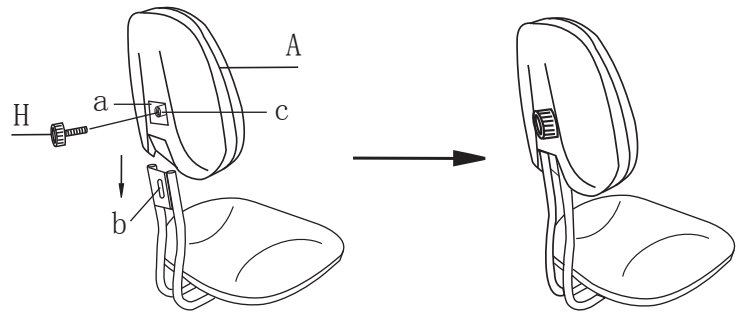



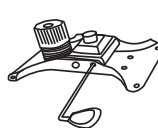
 

 
 
The back bar should be on top of the mechanism.

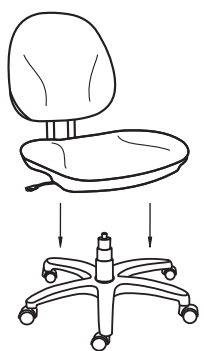3. 

Attach the knob(H) insert three parts, Back plastic(a), Back bar(b), Screw hole(c).

4. 

5. 

A.  1 PC	E.  1 PC	I.  4 PCS
B.  1 PC	F.  5 PCS	J.  4 PCS
C.  1 PC	G.  1 PC	K.  1 PC
D.  1 PC	H.  1 PC	

Model: IN4811/IN4821/IN4831/IN4841/IN4871/IN4819  
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ USSCo,  
 1 Parkway North, Suite 100, Deerfield, IL 60015 ©2011 USSCo  
 Made in/ Hecho en/ Fabriqué en China  
 Product support and parts: 1-800-733-4000  
 Ayuda del producto y partes / Support technique et pieces




# OPERATING INSTRUCTIONS

Model: IN4811/IN4821/IN4831/IN4841/IN4871/IN4819 with IN49AKA10B/IN49AKB10B armrests(sold separately)


## Seat Height

To raise the seat height, stand up from the chair while lifting the lever, "A," under the right side of the seat. To lower the seat height lift the lever, "A," while sitting in the chair.

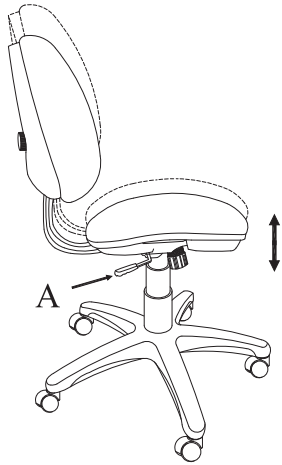


## Back height

To adjust the back height loosen the knob, "B," under the back left side support by turning clockwise, away from the seat.

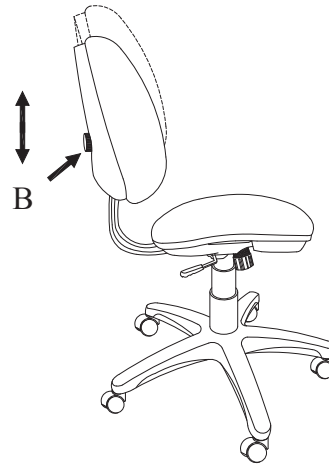

## Tilt

Pull the lever, "A," on the right side of the seat away from the chair and lean back to recline. Push the lever back in towards the chair and recline to lock the tilt angle.

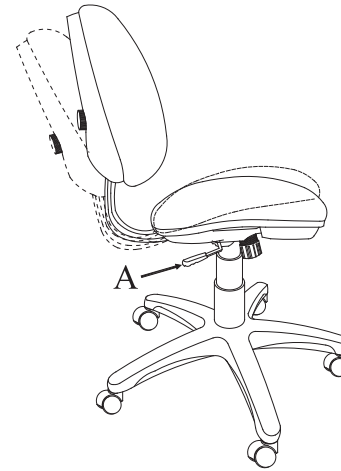

## Tilt Tension

Adjusts angle and ease with which chair reclines to the different weights and strengths of different users.

