

 
 



 






 


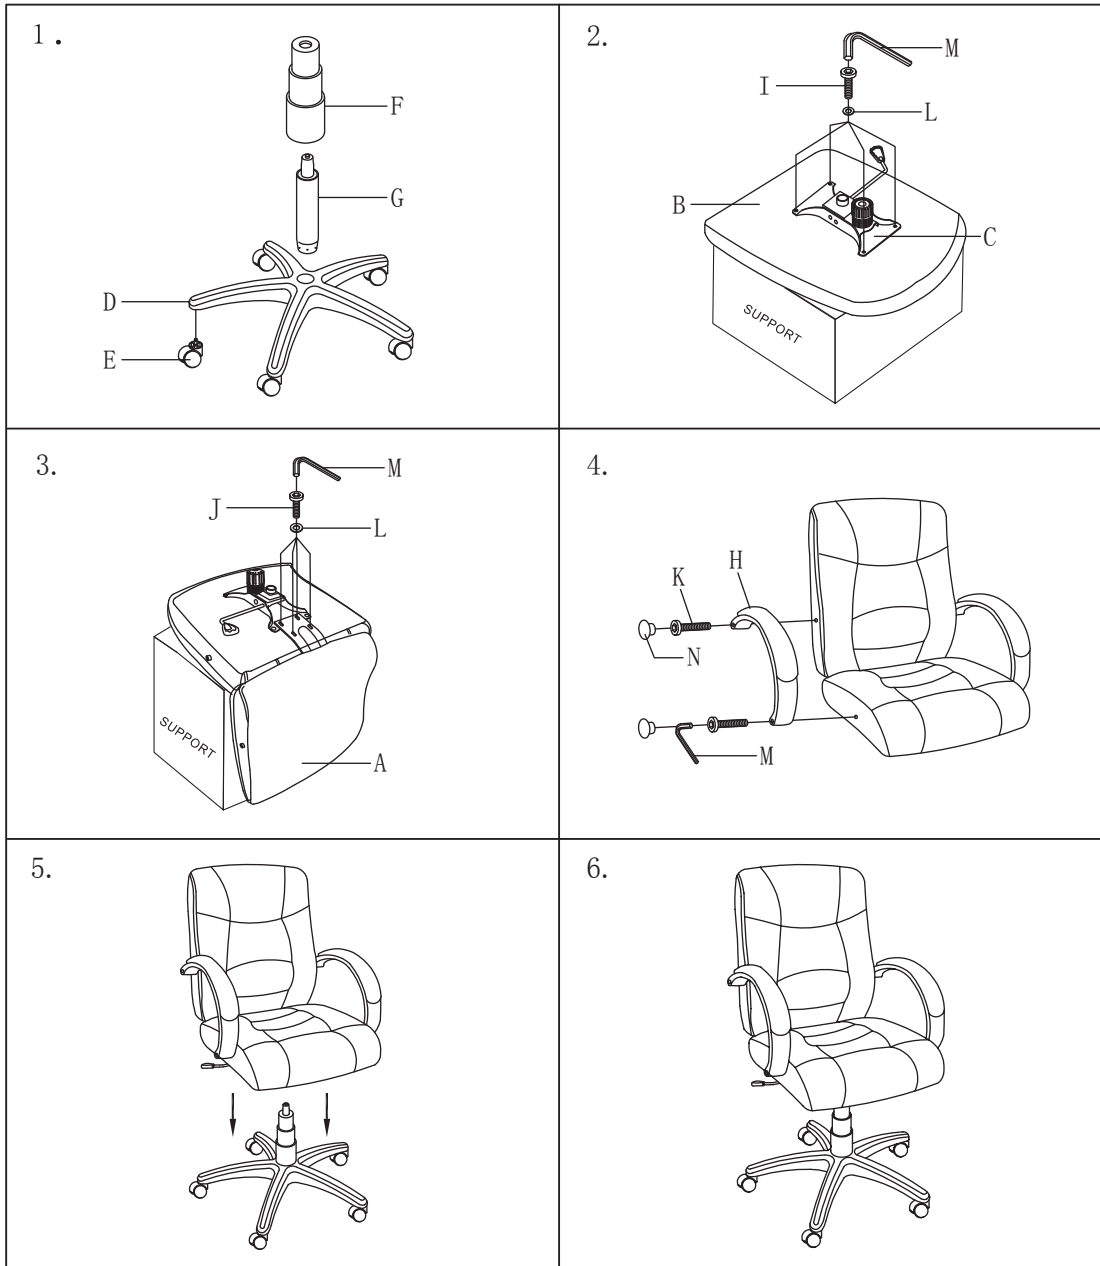

# ASSEMBLY INSTRUCTIONS



A.	 1 PC	F.	 1 PC	K.	 4 PCS
B.	 1 PC	G.	 1 PC	L.	 8 PCS
C.	 1 PC	H.	 1 PAIR	M.	 1 PC
D.	 1 PC	I.	 4 PCS	N.	 4 PCS
E.	 5 PCS	J.	 4 PCS		

Model: ALE-SR41LS10B/50B SR42LS10B/50B  
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ USSCo,  
 1 Parkway North, Suite 100, Deerfield, IL 60015 ©2010 USSCo  
 Made in/ Hecho en/ Fabriqué en China  
 Product support and parts: 1-800-733-4000  
 Ayuda del producto y partes / Support technique et pieces




# OPERATING INSTRUCTIONS

Model: ALE-SR41LS10B/50B and ALE-SR42LS10B/50B


## Seat Height

To raise the seat height, stand up from the chair while lifting the lever, "A," under the right side of the seat. To lower the seat height, lift the lever, "A," while sitting in the chair.

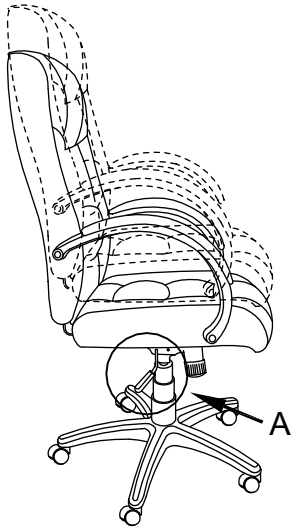

## Tilt Lock

Pull lever, "A," on the right side of the seat away from the chair and lean back to recline. To lock chair in upright position, push lever back towards the chair.

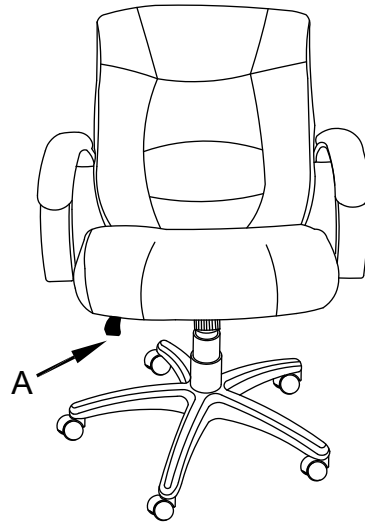

## Tilt Tension

Knob underneath seat adjusts ease with which chair reclines to the different weights and strengths of different users. To increase tension turn knob to the right. To release tension (loosen), turn knob to the left.

