□B7301 □B810 □B7906 □ B77 □B7501 □B750	101 B8801 B7 16 B8501 B79 01 B7706 B76 06 B8101 B85 06 B8811 B78	01 B7306 541 B7741 606 B7601
(1)x1	(2)x1	(3)x1 (L)x1 (R

(1)x1	(2)x1	(3)x1 (L)x1 (R)
(4)× 1	(5)x1	(6)x1
(7)× 5		

Please unscrew all screws from cushion before assembly.

8*(A)


M6 * 18

ARM SCREW

(B)*8

ARM CAP

M8 * 22 MECHANISM SCREW

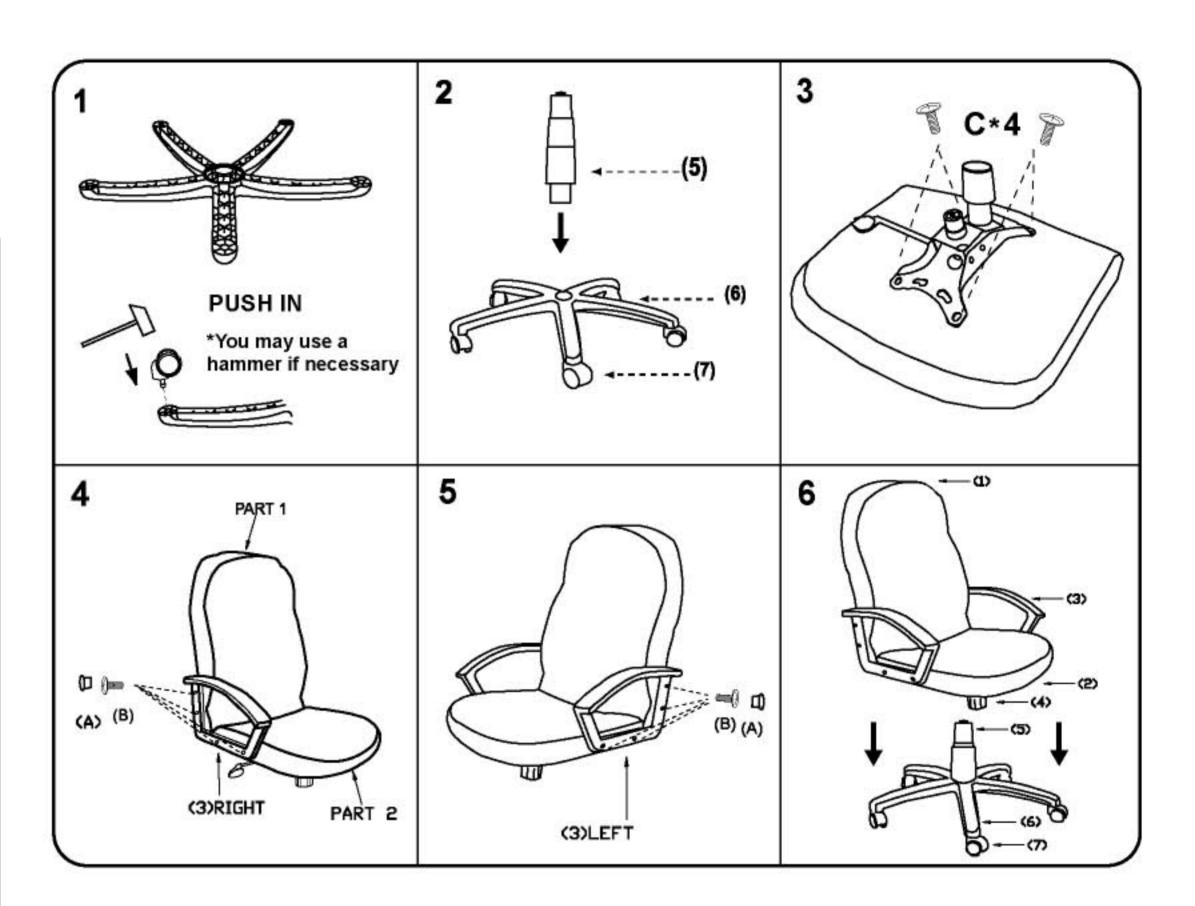

It is important to assemble all parts so that the directional "Arrows" point in the same direction. Make certain that all screws are FULLY tightened before using the chair. Each month, check all screws and tighten any that may have loosened.

Warning: Do not stand on the seat for any purposes

