




Assembly Instructions for Model CTS30

Café Time Stool

Recommended tools:

Power drill/driver with Phillips bit

1. Remove stool and backrest from the carton and carefully insert plastic protrusions of backrest into the tubes of upper portion of stool frame. See ILL. (A) & (B).
2. Gently push the plastic protrusions through frame tubes until completely inserted. Do not bang backrest with a hammer, but a rubber mallet may be used to gently tap the top of the backrest. Make sure that the backrest is completely inserted so that holes of stool frame tubes align with holes on side of backrest.
3. To complete installation of backrest, insert provided screws into the hole on each side of stool frame and secure using a power drill/driver with a Philips bit. See ILL (C).

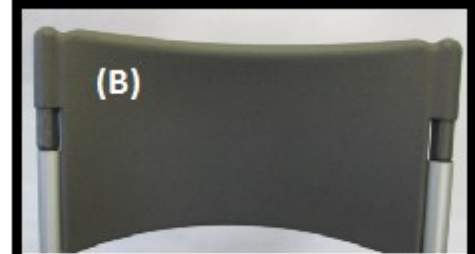

Dear Customer,

Thank you for your purchase. Although extreme care goes into the manufacturing and packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please call our customer service **TOLL FREE at 1-800-261-4112** for a courteous and immediate resolution to your problem.