



ULTRA-SPILL PALLETS, FLEXIBLE MODEL

PN 1340, 1341, 1345, 1346

ULTRA-SPILL DECK, FLEXIBLE MODEL

PN 1350, 1351, 1352

ULTRA-SPILL DECK BLADDER SYSTEM, FLEXIBLE MODEL

PN 1360, 1361, 1362

PRODUCT INSTRUCTIONS

Product Setup

1. Remove contents from the box and unfold the flexible containment Pallet or Deck
2. For Flexible models of the Ultra-Spill Pallets and Ultra-Spill Deck Bladder Systems, assemble the corrugated plastic support structure inside the flexible containment Pallet or Deck. For the Ultra-Spill Deck Bladder System, Flexible Model, go to the instructions below for installing the bladder prior to moving on the step 3 below.
3. Place the grating directly on the containment Pallet or Deck (for Ultra-Spill Deck, Flexible Model) or on the corrugated plastic support structure (for the Ultra-Spill Pallet, Flexible Model and the Ultra-Spill Deck Bladder System, Flexible Model) and rotate the sidewall support hooks into the appropriate edge holes in the grating.
4. Place the Flexible model of the Ultra-Spill Pallet, Ultra-Spill Deck, or Ultra-Spill Deck Bladder System on a level surface. For the Ultra-Spill Deck Bladder System, Flexible Model, place the unit so that the bladder has appropriate room to unfurl in case of a spill.

Installation of Bladder System

1. Install the bulkhead fitting through the pre-cut hole in the flexible containment Deck.
2. Install one rubber washer over the threads for the bulkhead fitting on the inside of the flexible containment Deck. Next, install one hard gasket over the threads inside the rubber washer. Tighten down the nut to create a seal between the flexible containment sump and the bladder.
3. Remove all elastic bands from the bladder shroud and the bladder itself. Failure to remove all elastic bands will result in bladder deployment failure.