

## Instructions for using the Ultra-I-Beam Protector ®

- 1. Remove the Ultra-I-Beam Protector from the shipping box.
- 2. When you are ready to install the Ultra-I-Beam Protector, remove the wooden spacer. (Removal of the wooden spacer more than 30 minutes in advance of installation may make it more difficult to install the unit).
- 3. Grasp the Ultra-I–Beam Protector with one hand on either side of the top end (unit is not directional so either end can be considered the top for installation purposes).
- 4. Pull hands apart to further open the unit to form an open wedge. This may also be done with a screwdriver or other "wedging" device that is approximately the same thickness as the I-Beam.
- 5. Hold the Ultra-I-Beam Protector at about a 45° angle to the I-Beam flange and starting with the top corner, push the unit onto the flange of the beam. Continue pushing the Ultra-I-Beam Protector on to the I-Beam flange by simultaneously pushing in and up until the unit is completely attached.
- 6. Position the Ultra-I-Beam Protector as desired by sliding the unit up or down on the flange of the I-Beam.
- 7. Up to 4 Ultra-I-Beam Protectors may be added to each I-Beam, by following steps 1-6 above.

Please call us at (800)353-1611 for a complete catalog or visit us on the web: <u>www.facilityprotection.com</u> for more information on our complete line of spill containment, storm water, spill response and facility protection products.