
 









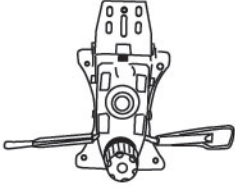
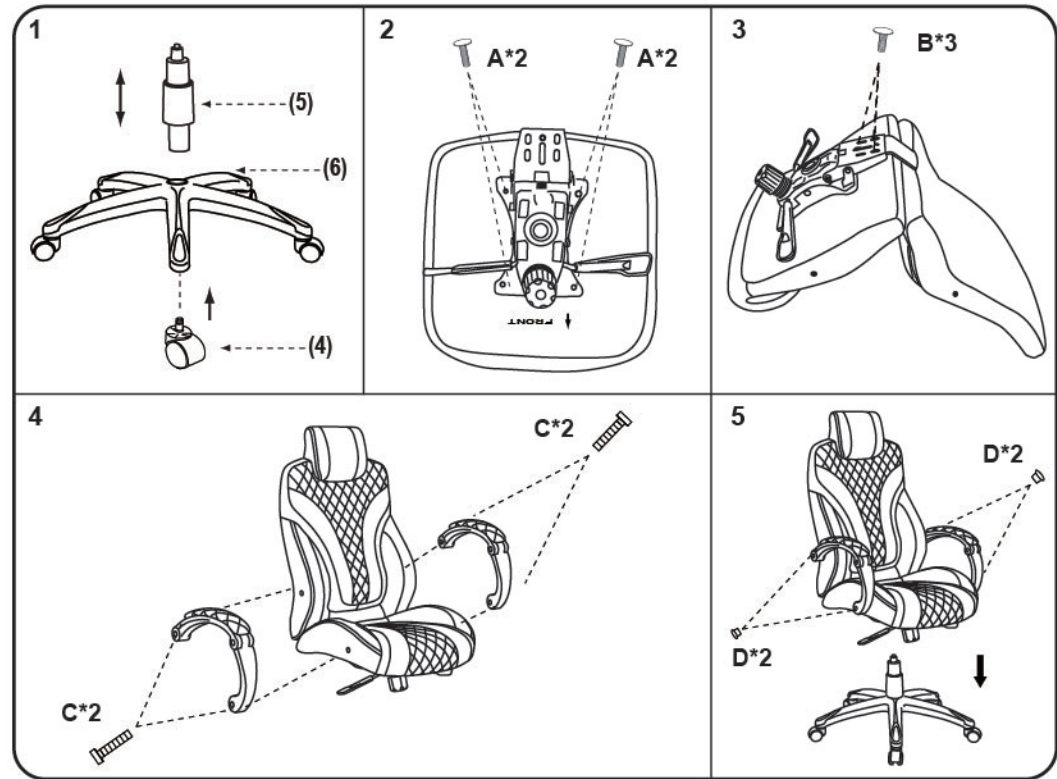


**IMPORTANT NOTICE:  
HARDWARE PACKAGE IS ATTACHED  
ON THE BOTTOM OF SEAT CUSHION.**

MODEL: B8871

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back Cushion	Seat Cushion	Left- Arm Right- Arm
(4)x 5	(5)x1	(6)x1
		
Caster	Gas Lift W/ Cover	Base
(7)x1	<p>(A)x4  M8*22 Mechanism Screw</p> <p>(B)x3  M8*18 L-bar Screw</p> <p>(C)x4  M8*55 Arm Screw</p> <p>(D)x4  Arm Cap</p> <p>(E)x1  Allen Key</p>	
	Mechanism	



**Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.**

