

Sign Base Bracket Installation Instructions


Tools Needed: 5/32" Allen Wrench and Adjustable Wrench




Step #1: Slide sign brackets over signpost, lining up with the holes in the sign



Step #2: Add set screw inserts into bracket holes, using a 5/32" Allen Wrench to tighten into place

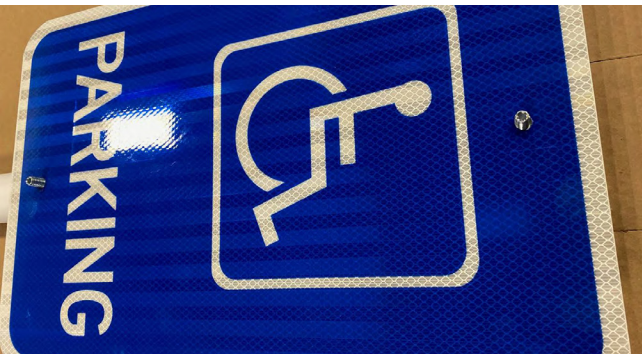

Step #3: Place sign on the brackets so screw inserts are through the sign holes

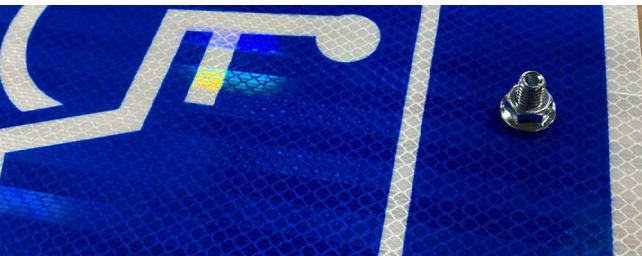

Step #4: Using an adjustable wrench, add hex nuts over the screw inserts to lock the sign into place

CONTACT US FOR A QUOTE TODAY

[800] 408-2718

WWW.DIGITALBUYER.COM



SIGN BRACKETS



FRONT VIEW



SIDE VIEW

Specifications

- Aluminum sign brackets allow for two signs to be mounted back-to-back on the signpost
- No drilling required; stainless steel hardware included
- For use with Ideal Shield sign systems
- Hole on the sign should be 3/8"



CONTACT US FOR A QUOTE TODAY
[800] 408-2718