


# VSWP

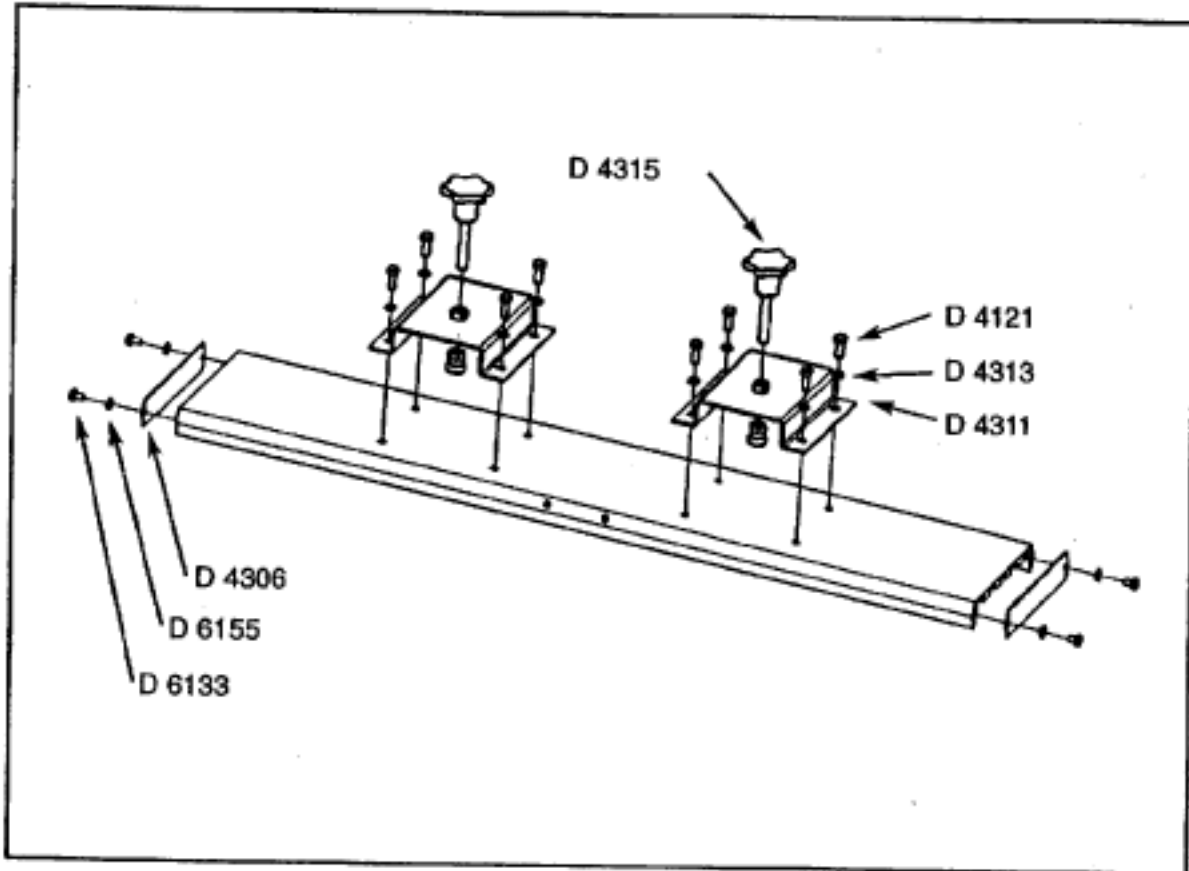

Part No.	Description	Quantity VSB-048	Quantity VSB-060
D 4121	3/8" - 16 X 1" Hex Bolt	8	8
D 4306	End Cap	2	2
D 4311	Fork Lift Pocket	2	2
D 4313	3/8" Lock Washer	8	8
D 4315	Lock Knob Assembly	2	2
D 6133	5/16" - 16 x 1/2" Hex Bolt	4	4
D 6155	5/16" Lock Washer	4	4
D 4268	48" Bristle Section	5	0
D 4304	48" Aluminum Hood Section	1	0
D 4265	60" Bristle Section	0	5
D 4305	60" Aluminum Hood Section	0	1

## **ASSEMBLY INSTRUCTIONS**

1. Install forklift pockets on broom hood using 3/8" hex bolts.
2. Thread knob through forklift pocket approx. 1". Position swivel foot so that screw can engage locking ring inside the swivel foot. Use the hood to screw down against to lock both pieces together. Repeat the process for the other side.
3. Install one end plate on broom.
4. Insert bristle into broom hood and slide in until it contacts the end cap.
5. Install other end cap and the broom is ready for use.

### **CARE AND USE OF YOUR NEW VALUE SWEEP BROOM**

1. Never store broom with bristles free standing on ground, this will cause the bristle to distort and decrease its performance.
2. Light down pressure with a slight tilt back on the forks will give the best sweeping performance.
3. Make sure forks are as far forward as possible before locking down.