


BEST-RITE®

"It's A Better Board"





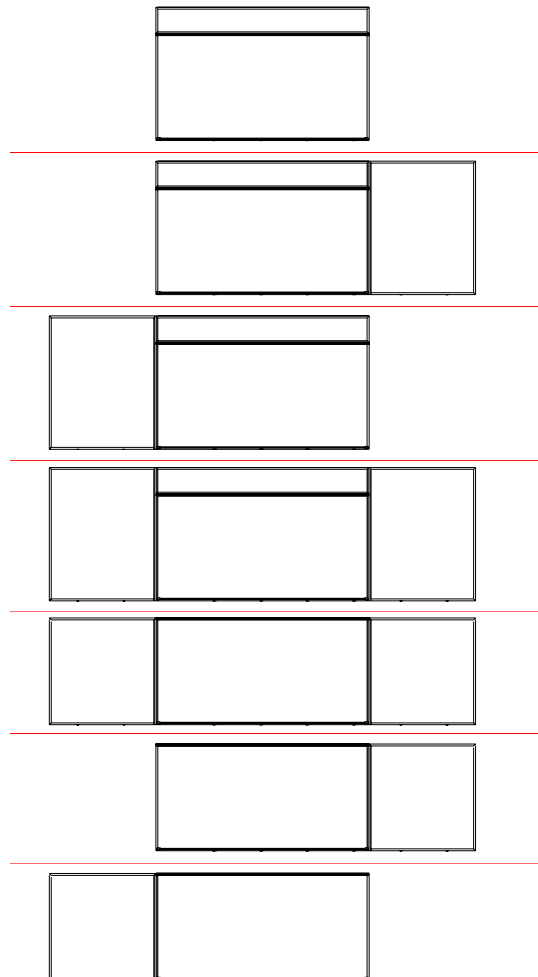


Combo-Rite Modular Boards

Layout Options








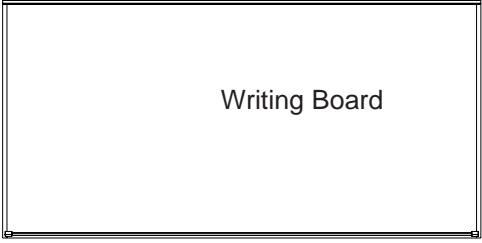Assembly Instructions

Combo-Rite Modular Boards

Part	Drawing	Description	Qty
P-1		Writing Board	1 EA
P-2		Side Tackboard	1-2 EA
P-3		Left 4' H-Bar	1 EA
P-4		Right 4' H-Bar	1 EA
P-5		Left 5' H-Bar	1 EA
P-6		Right 5' H-Bar	1 EA
P-7		Top Tackboard	1 EA

Hardware List


A		1-1/4" Screw	12-28 EA
B		L-Bracket	12-20 EA
C		1/2" Self Drill Screw	14-22 EA
D		Map Rail End (short)	1-2 EA
E		Map Rail End (long)	1-2 EA

Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m. Central Standard Time Toll-Free Customer Service

1-866-886-6935

Combo-Rite Modular Boards

Find your Board Type and check Part and Hardware List below, see page 2 for more descriptive details.

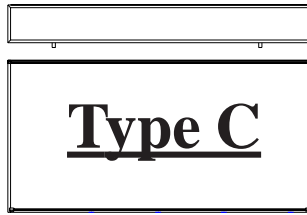

Part List

P-1 1 EA.
P-7 1 EA.

Hardware List

A 12 EA.
B 12 EA.
C 14 EA.
D 2 EA.




Part List

P-1 1 EA.
P-2 1 EA.
P-6 1 EA.
P-7 1 EA.

Hardware List

A 20 EA.
B 16 EA.
C 18 EA.
D 1 EA.
E 1 EA.

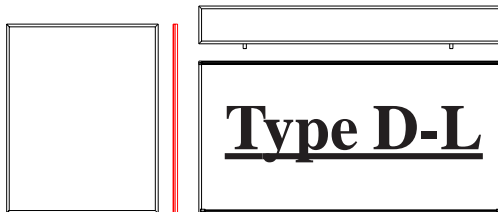


Part List

P-1 1 EA.
P-2 1 EA.
P-5 1 EA.
P-7 1 EA.

Hardware List

A 20 EA.
B 16 EA.
C 18 EA.
D 1 EA.
E 1 EA.

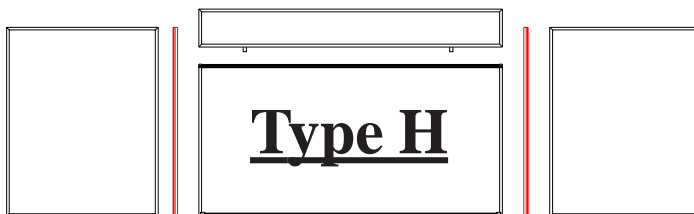

Part List

P-1 1 EA.
P-2 2 EA.
P-5 1 EA.
P-6 1 EA.
P-7 1 EA.

Hardware List

A 28 EA.
B 20 EA.
C 22 EA.
D 2 EA.



Part List

P-1 1 EA.
P-2 2 EA.
P-3 1 EA.
P-4 1 EA.

Hardware List

A 24 EA.
B 16 EA.
C 18 EA.
D 2 EA.



Part List

P-1 1 EA.
P-2 1 EA.
P-4 1 EA.

Hardware List

A 16 EA.
B 12 EA.
C 14 EA.
D 1 EA.
E 1 EA.



Part List

P-1 1 EA.
P-2 1 EA.
P-3 1 EA.

Hardware List

A 16 EA.
B 12 EA.
C 14 EA.
D 1 EA.
E 1 EA.

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.


To Assemble:

1. Identify and Separate all the Parts and Hardware.

This is a 2 person step.

2. Find the desired location for board on wall. Hold the board on the desired spot while someone marks the top and bottom of the board on the wall. Make sure marks are able to be cleaned from wall surface. Remove the board from the wall. Draw leveled line 1/2" below the top mark line on entire length of your board. Draw another leveled line 1" above your bottom mark on the wall entire length of the board. These two leveled lines are very important because you will be using them to fasten L-Brackets (B) to install your board. See Illustration # 1.

Illustration # 1

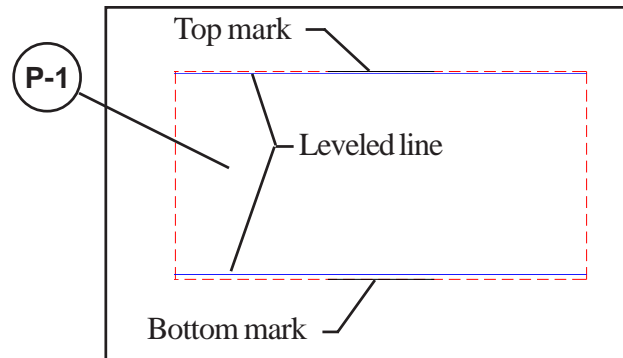

3. Use the leveled lines to fasten L-Brackets (B) with 1 1/4" Screw (A) for top L-Brackets (B) see illustration #2a, and bottom L-Brackets (B) see illustration #2b. These brackets would be 16" or 24" apart, based on where wall studs are located. Please make sure your L-Brackets (B) are secure on the wall by going through wall studs. You should be able to push the brackets up and down if you have to. If you can not locate wall studs you must use proper screw anchors per type of wall you have. See Illustration # 2, #2a and #2b.

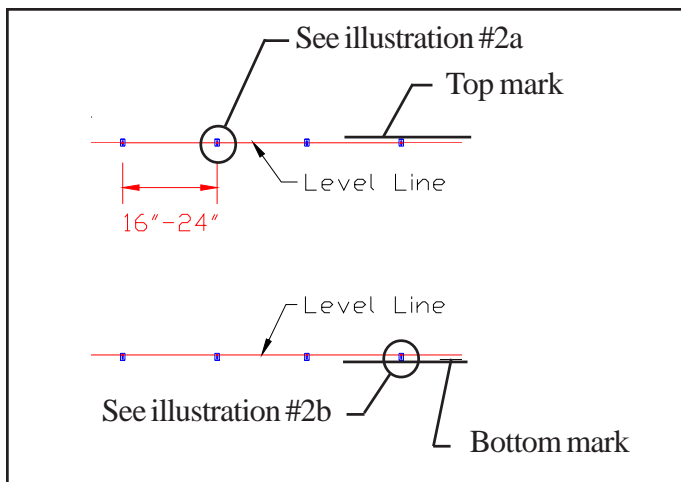


Illustration # 2

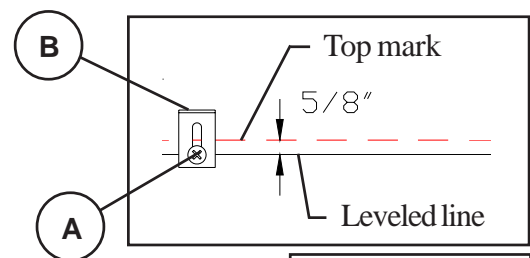


Illustration # 2a

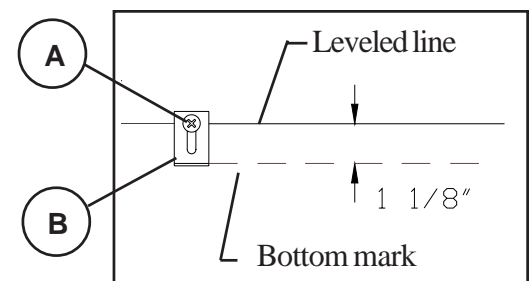


Illustration # 2b

4. Set the bottom of Writing Board (P-1) on L-Brackets (B) on the wall, make sure writing board is on the desired location. While someone holds this panel tightly against the wall, setting on the bottom L-Brackets (B), fasten the L-Brackets (B) to the bottom of Writing Board (P-1) by using 1/2" Self Drill Screw (C).
- The person holding the panel should Continue firmly pushing the Writing Board against the wall. Use ladder to reach comfortably to the top L-Brackets (B). Push the top L-Brackets (B) down until they are flush with top of the Writing Board (P-1), use 1/2" Self Drill Screws (C) to fasten the L-Brackets to the top of the writing board. See illustrations # 3

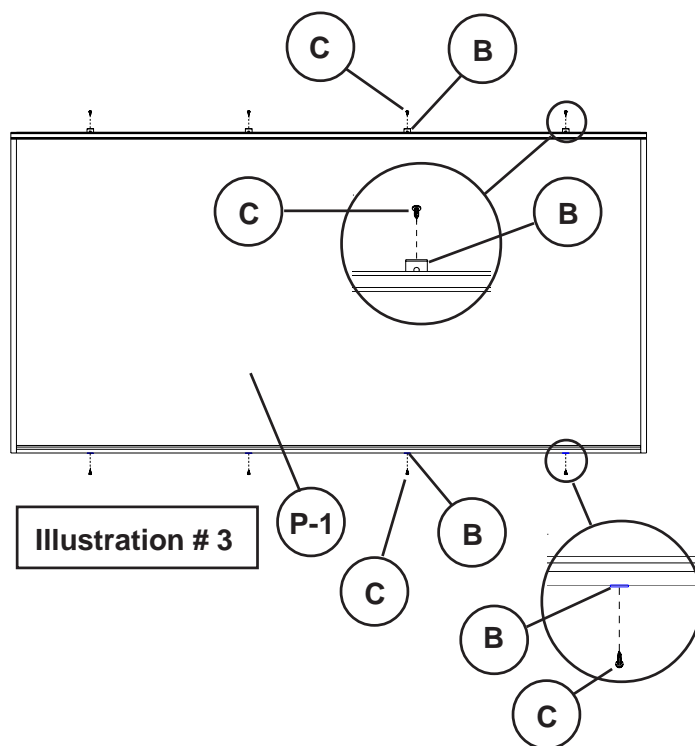


Illustration # 3

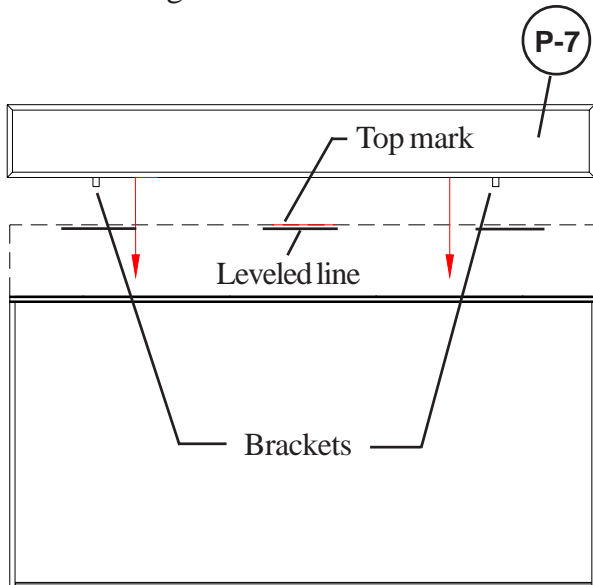


Illustration # 4

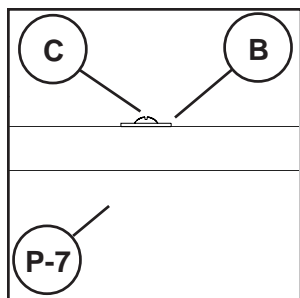


Illustration # 4b

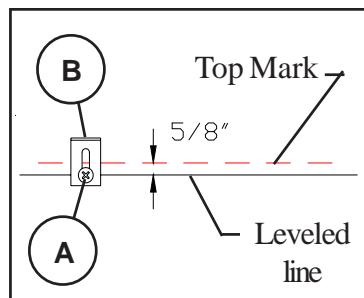







Illustration # 4a

If you have Top Tackboard (P-7) please follow Step 5.

5. Place the two brackets on the back of the Top Tackboard (P-7) behind the Writing Board (P-1), as it shown in illustration # 4. Tackboard (P-7) should be sitting on the writing board L-Brackets screw heads. Mark the top of Tackboard (P-7) on the wall in 3 locations preferably over the wall studs. Remove the Top Tackboard (P-7) and proceed with fastening the L-Brackets (B) by using the 1 1/4" Screw, 5/8" below the mark you made on the wall (leveled line). See illustration # 4a for detail. Place the Top Tackboard back on the wall, make sure you are flush with the Writing Board (P-1) on both sides. Push down the L-Brackets (B) to the top of the Top Tackboard (P-7), and fasten using 1/2" Self Drill Screws (C). See illustration #4b.




Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m. Central Standard Time Toll-Free Customer Service 1-800-749-2258

6. Place the Side Tackboard against the Writing Board making sure the bottom of the two panels are even. Mark the top and bottom of the Tackboard on the wall and remove the board from the wall. Make a level line $5/8''$ below the top mark and $1\ 1/8''$ above the bottom mark line. Fasten L-Brackets (B) on the leveled line in two spots where wall studs are. See illustrations # 5, 5a and 5b.

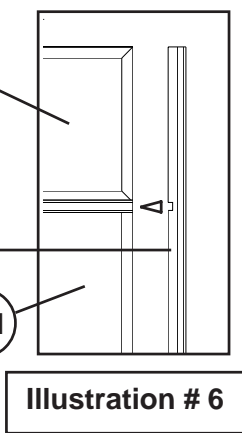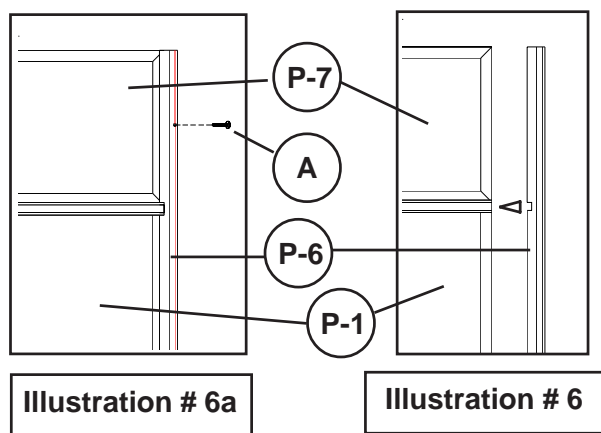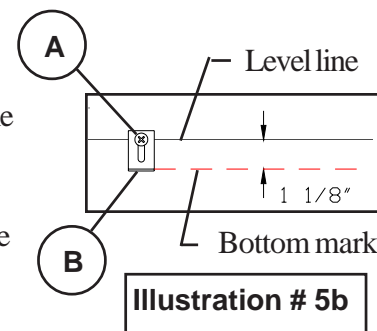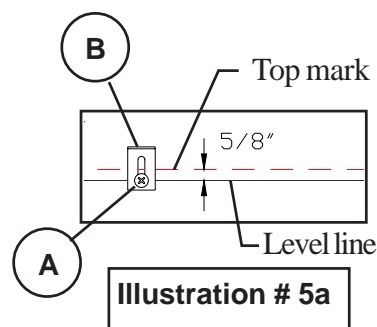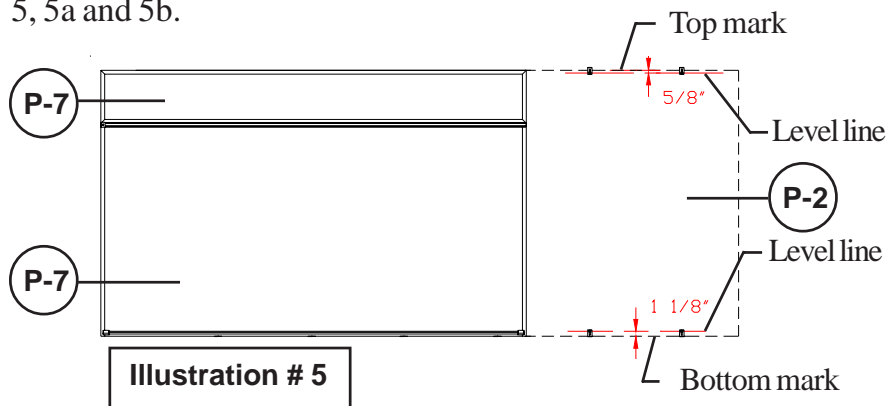

7. Place the Right 5' H-Bar (P-6) or Left 5' H-Bar (P-5) or both if you have type H Combo-Rite over the side of Writing Board (P-1) frame. Make sure notch on H-Bar falls into the end of the writing board map rail as the arrow shows in illustration # 6. Match the bottom of Writing Board and the H-Bar (P-4) for the right and (P-5) for the left and if you don't have the Top Tackboard (P-7) your H-Bar will only be 4' long using (P-4) for the right and (P-3) for the left side of your board. Fasten the H-bar to the wall with three $1\text{-}1/4''$ Screws (A). See Illustration # 6 and 6a.

8. Measure the H-Bar (P-6) and use the side of Side Tackboard (P-2) that matches the H-Bar length. One of the four corners on back of the Side Tackboard has a fastener. **DO NOT** force that side of the board into the H-Bar Channel. After placing the correct side of the Side Tackboard (P-2) into the H-Bar channel fasten your board to the L-Brackets (B) by using $1/2''$ Self Drill Screws (C). See illustrations # 7.

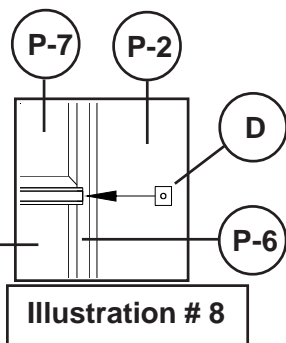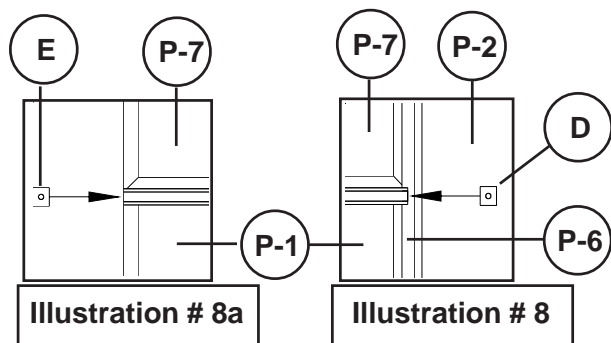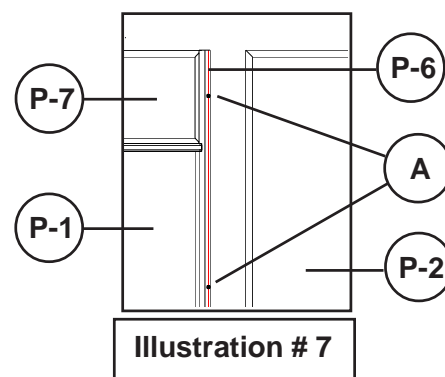

9. Insert all your map rail accessories. Use Map Rail End (short) (D) if you have H-Bar (P-6) for right, and or (P-5) for left side, but if you don't have H-Bar (P-6) nor (P-5) use Map Rail End (Long) (E), and fasten them with $1/2''$ Self Drill Screws (C). See illustrations # 8 and 8a.