
Econo-Mizer 4º Picnic Table


For Fastener Pack (FP-EPT4-CU-01)

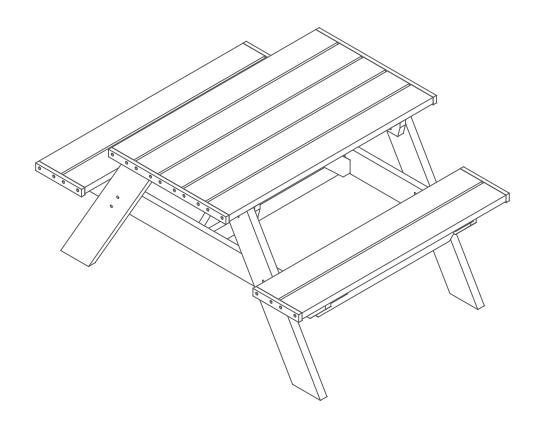


Congratulations!!

You have purchased the finest recycled plastic picnic table available. Enjoy!!!

Before assembly, please check to make sure all components are included.

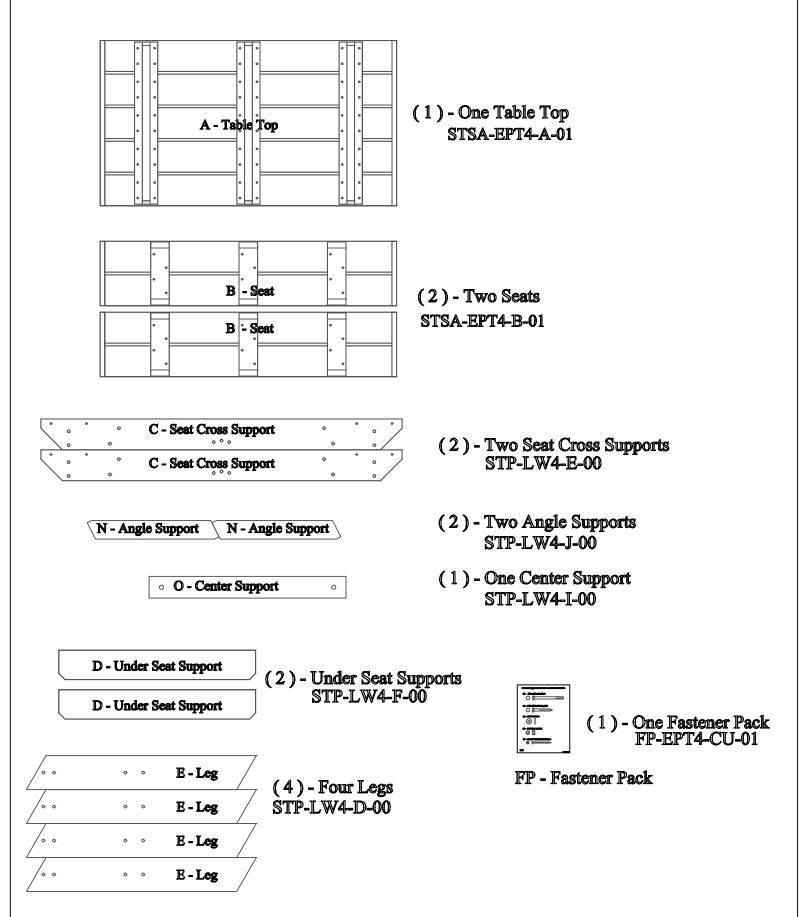


Before assembly, please check to make sure all fasteners are included.
2 - 3/8" x 4" Hex Head Tap Bolt
16 - 3/8" x 3 1/4" Hex Head Bolt
8 - 3/8" x 3" Hex Head Lag Bolt
4 - 3/8" x 2 1/2" Hex Head Lag Bolt
46 - 3/8" Flat Washer 2 - 5/8" x 1" Cross Dowel
16 - 3/8" Nylon Lock Nut
8 - #12 x 3" Flat Head Phillips Screw
Also needed for this assembly will be the following materials: 1 - #3 Phillips Drive Bit 2 - 9/16" Socket Bit 1 - 1/4" Flat Head Screwdriver

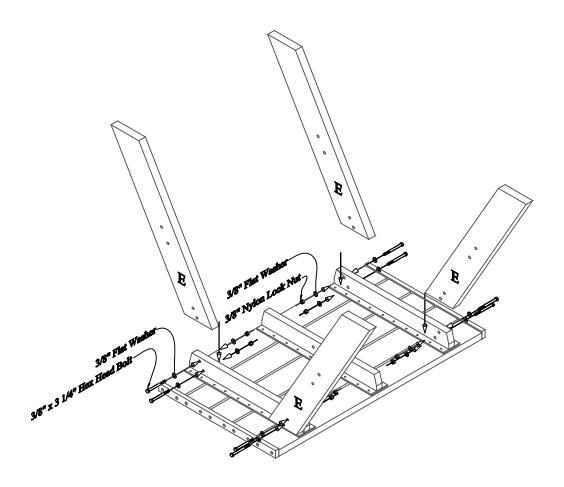

Step #1

While the table top is upside-down, fasten the legs to the left and right top supports as shown above. Use (1) One 3/8" x 3 1/4" Hex Head Bolt and (1) 3/8" Flat Washer along with, (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to secure.


Note: Do not tighten bolts completely. This will be done in a later step.

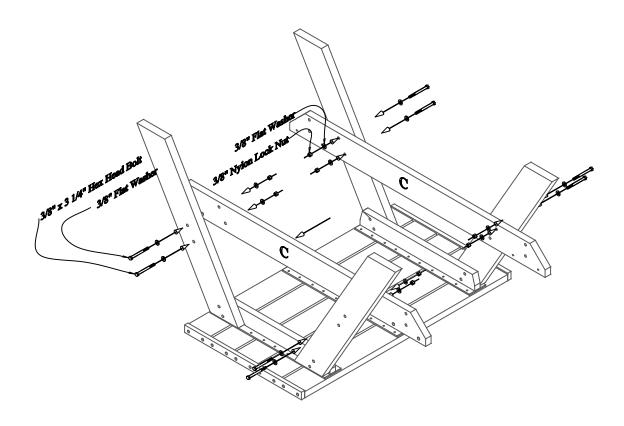

Step #2:

While the table is upside-down, fasten the seat cross supports to the legs. Use (1) One 3/8" x 3 1/4" Hex Head Bolt and (1) One 3/8" Flat Washer along with (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to secure.

Note: Do not tighten bolts completely. This will be done in a later step.

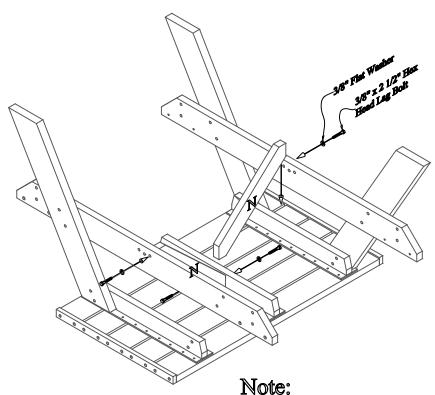

Leg is removed to show detail. Do not remove for this step.


Step #3:

While the table top is upside-down, fasten the angle supports to the seat cross supports and the center top support. Use (1) One 3/8" x 2 1/2" Hex Head Lag Bolt and (1) One 3/8" Flat Washer per hole to secure.

Note: Be sure to tighten all loose bolts after this step is complete.

Step #4:

Place (1) One 5/8" x 1" Cross Dowel in each hole of the Center Support as shown in the diagram below. You may need to tap the Cross Dowels in place. Be sure the score on the dowel head is in line with the length of the Center Support as shown below.

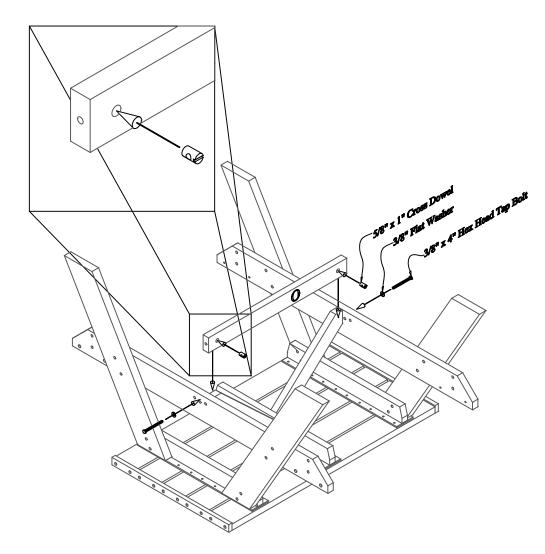


Step #5:

While the table top is upside-down, fasten the center support to the seat cross supports. Use (1) One 3/8" x 4" Hex Head Tap Bolt and (1) One 3/8" Flat Washer per hole to secure.***

IMPORTANT NOTICE

There should be a gap between the center support and the seat cross supports! Do not tighten until snug. This is intended to allow for adjustability in the table top. Only tighten the Tap Bolts to the point where the table top is flat.

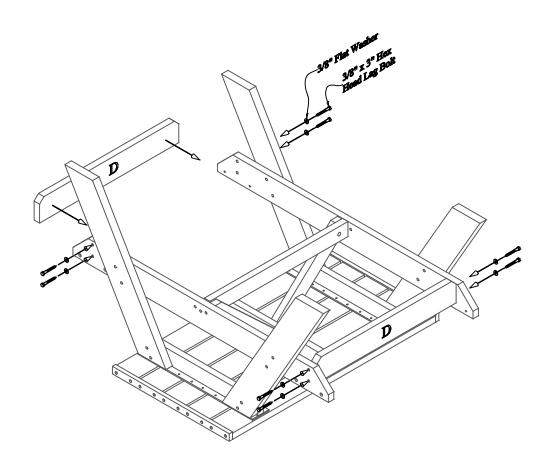

Step #6:


While the table top is upside-down, fasten the under seat supports to the seat cross supports. Use (1) One 3/8" x 3" Hex Head Lag Bolt and (1) One 3/8" Flat Washer per hole to secure.

Note: Be sure to tighten all loose bolts after these steps are complete.



Step #7:

Flip the table upright onto the legs. Please take caution while flipping the table. At this point in assembly the table weighs approximately 158 Pounds.

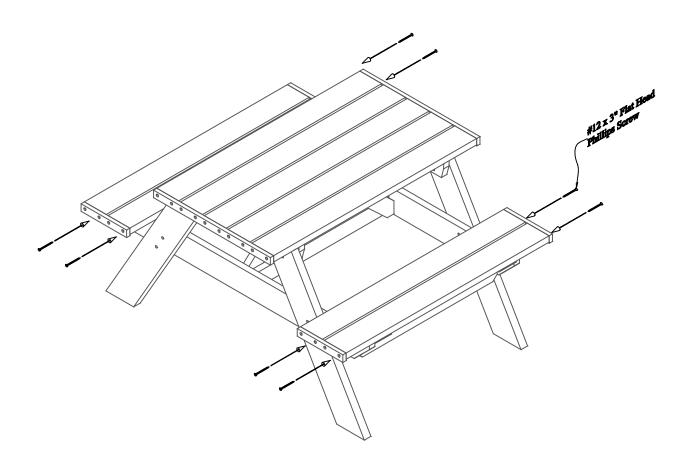

Step #8:

While the table is upright fasten the seats to the seat cross supports Making sure the gap in the seat is centered over the cross supports. Use (1) One $\#12 \times 3$ " Flat Head Phillips Screw per hole to secure.

DEAR VALUED CUSTOMER,

THANK YOU FOR PURCHASING THIS
PRODUCT. THIS PRODUCT IS
MANUFACTURED USING RECYCLED
MATERIALS AND MAY HAVE SLIGHT
COLOR VARIATIONS, OCCASIONAL
SPECKS OF COLOR OR IRREGULAR
SURFACE PATTERNS. THESE ARE
NORMAL CONDITIONS OF RECYCLED
PLASTICS AND MAKE EACH PIECE OF
FURNITURE UNIQUE. THESE
CHARACTERISTICS DO NOT AFFECT THE
STRENGTH, QUALITY OR PERFORMANCE
OF THE PRODUCT.

THANK YOU AGAIN FOR PURCHASING THIS PRODUCT AND HELPING OUR ENVIRONMENT.