
18" Wide Standard Lockers – 18-53000 Series Triple Tier Installation Instructions


Thank you for selecting Salsbury's 18" wide standard triple tier lockers. These instructions are intended to assist you in assembling the lockers. Assembly of the various locker components will be with #10 - 24 x 3/8" long slot less screws and #10 nuts (provided). Loosely fasten a screw and a nut into every set of mating holes with the screw heads positioned on the outside of the locker or on the exposed surface.

One Wide Locker Assembly


Step 1: Attach the top shelf, bottom shelf, and three coat hooks to the back panel.

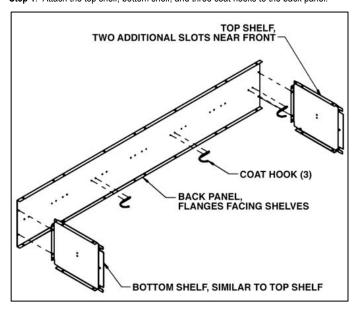


Step 2: Turn the back panel on its back with the shelves pointing upward. Attach the first side panel, the left rear leg, and two compartment dividers to the assembly from Step 1. Attach an additional three coat hooks to the first side panel.

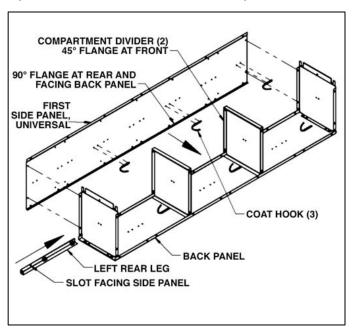

Step 3: Attach the second side panel and the right rear leg to the assembly of Step 2. Attach an additional three coat hooks to the second side panel. The locker chassis is now complete.

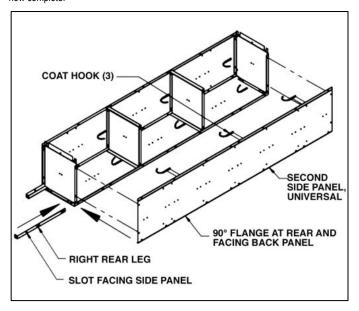

Step 4: Attach the pre-assembled door frame onto the assembly of Step 3.

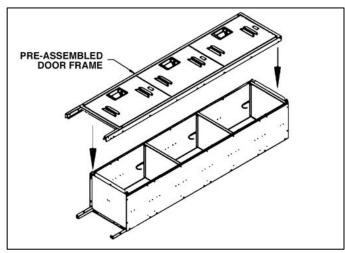

Step 5: Tighten all fasteners checking for squareness of the locker while tightening. Attach optional sloping hood, end bases or front base (see pages 4 and 5).

Step 6: Place the locker in the installed location and anchor to the floor, wall, or to both. Individual job conditions will dictate the type of fastening anchors to use (not provided).

Step 7: Fasten all lockers in a row together by installing fasteners provided through the side panels. Installation is now complete.

Int'l Phone: 323-846-6700

Int'l Fax: 323-846-6800

Phone: 1-800-562-5377 Fax: 1-800-562-5399


SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008


18" Wide Standard Lockers – 18-53000 Series Triple Tier Installation Instructions

Three Wide Locker Assembly

Step 1: Attach a top shelf, a bottom shelf, and three coat hooks to a back panel.

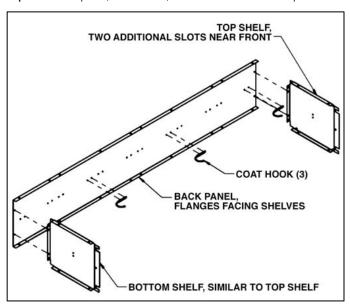


Step 2: Turn the back panel on its back with the shelves pointing upward. Attach the first side panel, the left rear leg, and two compartment dividers to the assembly from Step 1. Attach an additional three coat hooks to the first side panel.

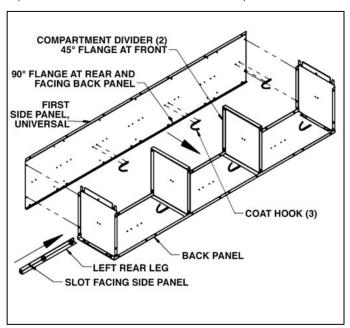


Step 3: Attach the second top shelf, the second bottom shelf, and an additional three coat hooks to the second back panel as in step 1.

Step 4: Simultaneously attach the assembly of Step 3 (second Step 1 assembly), the second side panel, and two additional compartment dividers to the assembly of Step 2. Attach three coat hooks to each side of the second side panel.

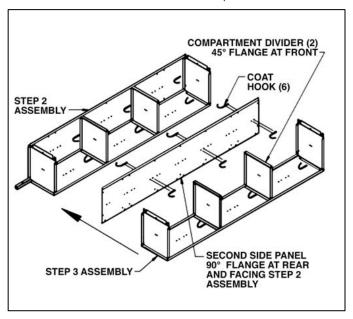

Step 5: Attach the third top shelf, the third bottom shelf, and an additional three coat hooks to the third back panel as in steps 1 and 3.

Step 6: Simultaneously attach the assembly of Step 5 (third Step 1 assembly), the third side panel, and two additional compartment dividers to the assembly of Step 4. Attach three coat hooks to each side of the third side panel.

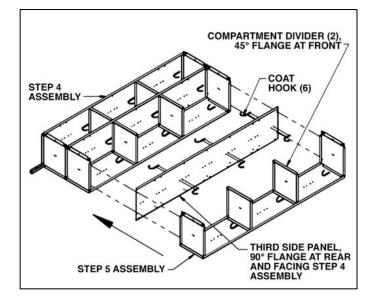

Int'l Phone: 323-846-6700

Int'l Fax: 323-846-6800

Phone: 1-800-562-5377
Fax: 1-800-562-5399


SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008


18" Wide Standard Lockers – 18-53000 Series Triple Tier Installation Instructions

Three Wide Locker Assembly (continued)

Step 7: Attach the last side panel and the right rear leg to the assembly of Step 6. Attach three additional coat hooks to the last side panel. The locker chassis is now complete.

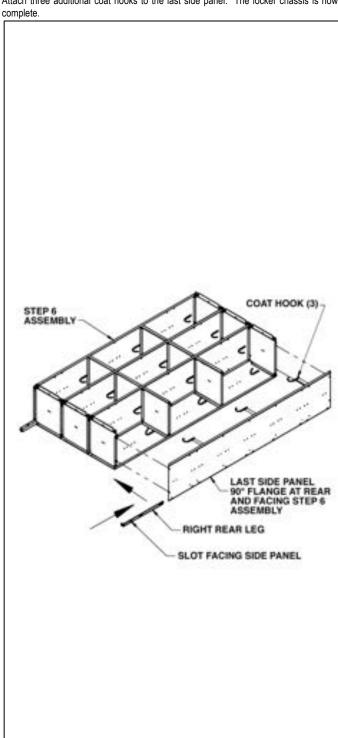

Step 8: Position the pre-assembled door frames onto the assembly of Step 7 then fasten one by one.

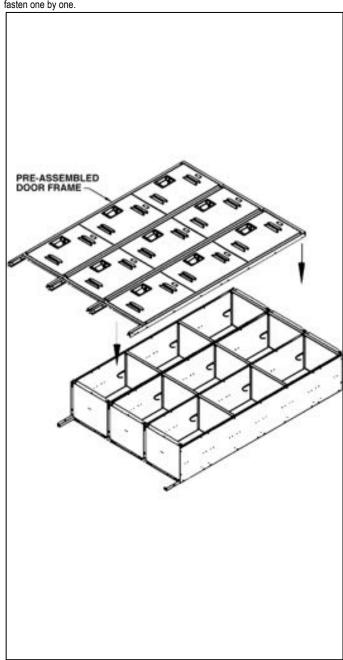

Step 9: Tighten all fasteners checking for squareness of the locker while tightening. Attach optional sloping hoods, end bases or front bases (see pages 4 and 5).

Step 10: Place the locker in the installed location and anchor to the floor, wall, or to both. Individual job conditions will dictate the type of fastening anchors to use (not provided).

Step 11: Fasten all lockers in a row together by installing fasteners (provided) through the side panels. Installation is now complete.

Int'l Phone: 323-846-6700

Int'l Fax: 323-846-6800

Phone: 1-800-562-5377 Fax: 1-800-562-5399

SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008


Installation instructions are provided as general guidelines. It is advised that a professional installer be consulted. Salsbury Industries assumes no product assembly or installation liability.

Copyright © 2020 Salsbury Industries. All rights reserved. Page 3 of 5 10/25/17


18" Wide Standard Lockers – 18-53000 Series Triple Tier Installation Instructions

Sloping Hood Installation (Optional)


Step 1: Assemble the top panel to the rear panel with #10 - $24 \times 3/8$ " slot less screws and #10 nuts (provided). Position the flange of the top panel behind the rear panel.

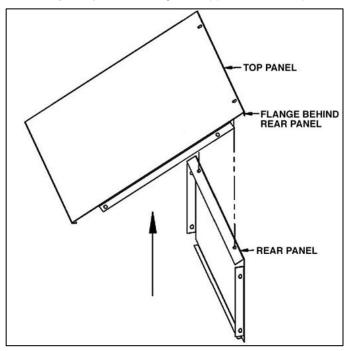

Step 2: Assemble the side panels to the top panel and rear panel with #10 - 24 x 3/8" long slot less screws and #10 nuts (provided).

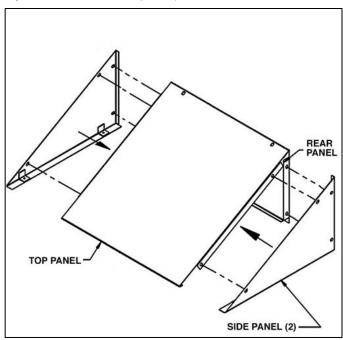

Step 3: Attach the sloping hood to the top of the locker with #10 - 24 x 3/8" slot less screws and #10 nuts (provided).

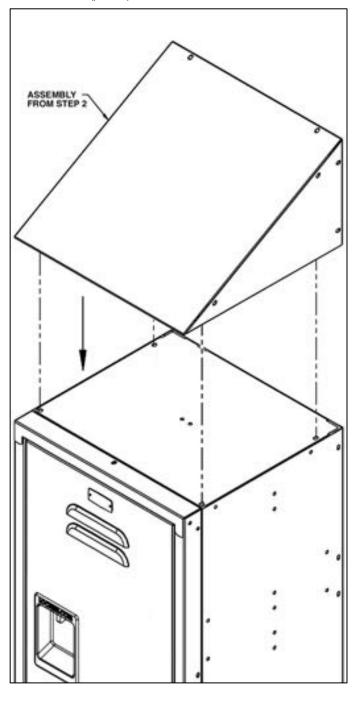

Phone: 1-800-562-5377 Fax: 1-800-562-5399

SALSBURY INDUSTRIES


18300 Central Avenue, Carson, CA 90746-4008

Int'l Phone: 323-846-6700 Int'l Fax: 323-846-6800

18" Wide Standard Lockers – 18-53000 Series Triple Tier Installation Instructions


Front Base Installation (Optional)

Position the front base between the front legs of the locker with the flange upward. Assemble to the locker with #10 - $24 \times 3/8$ " slot less screws and #10 nuts (provided).

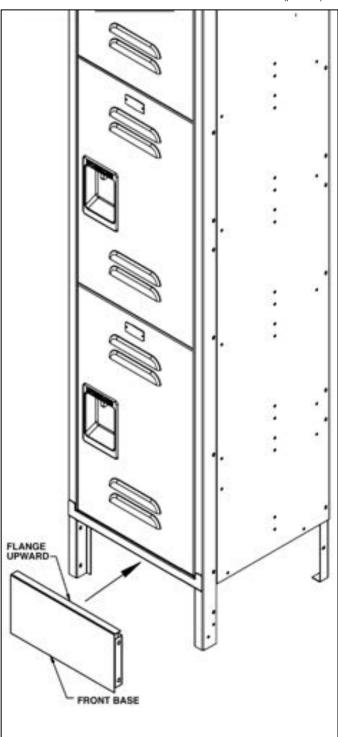

End Base Installation (Optional)

Position the appropriate end base (right or left) behind the corresponding side legs (right or left) of the locker with the flange upward. Assemble to the locker with $\#10 - 24 \times 3/8$ " slot less screws and #10 nuts (provided). Repeat for the other side.

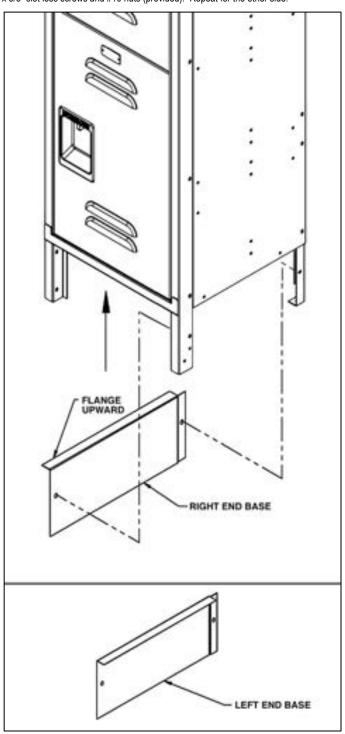

Phone: 1-800-562-5377 Fax: 1-800-562-5399

SALSBURY INDUSTRIES

18300 Central Avenue, Carson, CA 90746-4008

Int'l Phone: 323-846-6700 Int'l Fax: 323-846-6800