

LIFT-RITE®

**OWNER'S MANUAL, OPERATING INSTRUCTIONS MANUAL,
and REPLACEMENT PARTS MANUAL**

Lift-Rite® Legal for Trade Scale Hand Pallet Truck - Model LFTSC



This publication, 1234959A, applies to the Lift-Rite® LFTSC Hand Pallet Trucks and to all subsequent releases of this product until otherwise indicated in new editions. Changes occur periodically to the information in this publication.

To order additional copies of this manual, part number 1234959A, contact your local authorized Lift-Rite Sales and Service Center.

If you need assistance with your lift truck, contact your local authorized Lift-Rite Sales and Service Center.



For more information please visit www.liftright.com

©2016

TABLE OF CONTENTS

| | |
|--|----|
| DELIVERY INSPECTION | 3 |
| OPERATING INSTRUCTIONS | 3 |
| SAFETY (read and understand prior to using this product) | 4 |
| SYSTEM SETUP | 5 |
| Mounting the Pump Handle | 5 |
| The Battery | 6 |
| OPERATION MANUAL | 7 |
| USING THE WEIGHING HAND PALLET TRUCK | 7 |
| Accurate Weighing | 7 |
| Taking the System into Operation | 8 |
| Maintenance | 8 |
| TOUCH PANEL INDICATOR | 9 |
| The Display | 10 |
| The Touch Panel | 11 |
| Error Messages | 12 |
| INDICATOR FUNCTIONS | 13 |
| Graduation | 13 |
| Before Weighing: Check Zero Point | 13 |
| Gross Weighing | 13 |
| Net Weighing: Automatic Tare | 13 |
| Tare Weights | 14 |
| Sample Tare Entry | 14 |
| Piece Count: Sampling | 15 |
| Piece Count: Enter a Piece Weight | 15 |
| Summing | 16 |

| | |
|--|----|
| Change Units | 16 |
| PRINTER (OPTION) | 17 |
| The Print Out | 17 |
| Changing the Thermal Paper Roll | 18 |
| Changing the Time and Date on the Print-out | 19 |
| TROUBLESHOOTING | 20 |
| SPARE PARTS EXPLODED VIEW | 25 |
| SPARE PARTS LIST – Weighing Hand Pallet Truck Model LFTSC | 26 |
| CALIBRATION | 28 |
| Calibration Instructions Indicator | 28 |
| Defining Zero | 28 |
| Single Point Calibration | 28 |
| Calibrating the single point | 29 |
| Multi-Point Calibration | 30 |
| PARAMETER SETTINGS | 31 |
| LIFT-RITE® LEGAL FOR TRADE SCALE TRUCK (LFTSC) WARRANTY CERTIFICATE | 35 |


| | |
|---|---|
|  | <p>SAFETY SHOES <i>Always</i> wear safety shoes when working with hand pallet trucks.</p> |
|  | <p>PROTECTIVE GLASSES When assembling or dismantling a hand pallet truck, protective glasses <i>must</i> be worn to avoid personal injury.</p> |
| | <p>OPERATOR'S RESPONSIBILITY While operating a hand pallet truck, <i>always</i> wear safety equipment and operate in a responsible manner to ensure a safe work area.</p> |

DELIVERY INSPECTION



Visually inspect the frame components and hydraulic unit for damage during shipment by carrier. If damage is evident, notify delivering carrier immediately and file necessary claims. Test the manual pump for proper operation. **If the hydraulic pump does not respond to movement of the handle, an air lock may have developed during shipping. To remedy this, go to the user friendly TROUBLESHOOTING guide in this manual.**

OPERATING INSTRUCTIONS


(Read and understand prior to using this product)



To raise the load, push down on the fingertip control. Pump the handle to raise the load from the floor.



To lower the load, pull up on the fingertip control.



For free handle movement, place the fingertip control in the neutral position.

NOTE:

The neutral position disengages the pump from the lifting mechanism. This frees the handle, which makes pulling loads easier. In addition, the pump is not subject to shock pressures while the truck is in motion.

SAFETY (read and understand prior to using this product)

- Read and obey all labels on this product. If you have any questions about these, ask your supervisor.
- Do *not* operate this hand pallet truck unless you are authorized and trained to do so.
- *Never* overload your hand pallet truck. Stay within its rated capacity.
- Do *not* operate this truck if damaged or not in proper working order.
- Distribute the load evenly on the forks. Do *not* concentrate loads at one point or load one fork more than the other.
- When the load impairs visibility, the hand pallet lift truck should be pulled and not pushed.
- *Always* look where you are operating. Keep a clear view.
- Only handle loads on flat level surfaces. Do *not* use a loaded truck on inclines or declines.
- *Never* carry passengers.
- *Never* put your feet, hands, or any other body part under the frame assembly.
- *Always* yield right of way to pedestrians.
- Do *not* allow your hand pallet truck to drop from one level to another. Even a drop of 1 in. (25 mm) more than doubles the effective load momentarily and results in a loading that can bend or break components.
- Move loads only with the hand pallet truck in its lowest position.
- *Always* make sure that the load is stable before moving to eliminate the opportunity for load shift.
- Use extreme care when rounding corners. Too fast a speed could cause a hand pallet lift truck to tip. If loaded, the load could shift and fall.
- When not in use, fully lower the forks.
- *Never* lift a heavy load with just the points of the forks. This could damage the electronic weighing elements permanently.
- *Never* weigh without a pallet. This could affect the accuracy of the weighing result.
- The unit may be loaded with weights up to 5000 lb. (2268 kg).
- Do *not* operate the weighing system on ramps, inclines or declines, without the addition of our optional parking brake.
- Do *not* operate the weighing system while others are on or near the unit. No riding!
- Do not use the weighing system in potentially explosive areas.
- Do not weld or make changes to the weighing system without consulting the supplier.
- Check the accuracy of the scale on a regular basis to prevent faulty readings.
- *Never* lower loads if you are unsure you can place the load on a stable surface. Personal injury may result from placement on an unstable environment.
- *Always* remain with the scale during dosing applications. Incorrect lifting of the pallet can cause overflowing.
- Lift-Rite is not responsible for errors that occur due to incorrect weights or inaccurate scales.

SYSTEM SETUP**Mounting the Pump Handle**


1. Make sure the lever is pushed down to the "pump" position.



2. Thread the chain through the hole in the triangle and through the hole in the axle.



3. Place the handle bar onto the triangle and insert the bolts.
4. Tighten the bolts firmly.

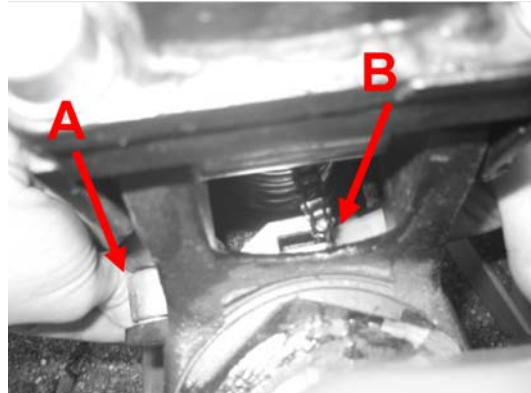

5. Push the silver part "A" on the outside of the pump downwards.
6. At the same time; insert the chain into the open side of the slot "B" on the inside of the pump.

The Battery

The power supply to the system takes place through an exchangeable battery pack. A completely charged battery should operate for a total weighing time of about 35 hours (on a system without a printer).



CAUTION! - When the voltage level of the battery is running low, the display will show "LO-BA". When the battery is completely empty, the weighing system shuts off.

It is necessary to charge the battery for at least 6 hours before the first use. Recharge battery when the LO-BA indicator comes on.



If you use the system in shift work or if the system has a built-in printer, it is recommended to purchase a supplementary battery pack.

The battery should be charged on the adapter supplied with the charger. When the battery is charging, the LED on the charger is lit. When the LED turns off, the battery is fully charged.

It is not possible to overload the battery because the charger shuts off automatically.

OPERATION MANUAL**USING THE WEIGHING HAND PALLET TRUCK****Accurate Weighing**

The weight must be centered over the forks of the pallet truck and lift freely: without touching the housing of the indicator or other pallets.

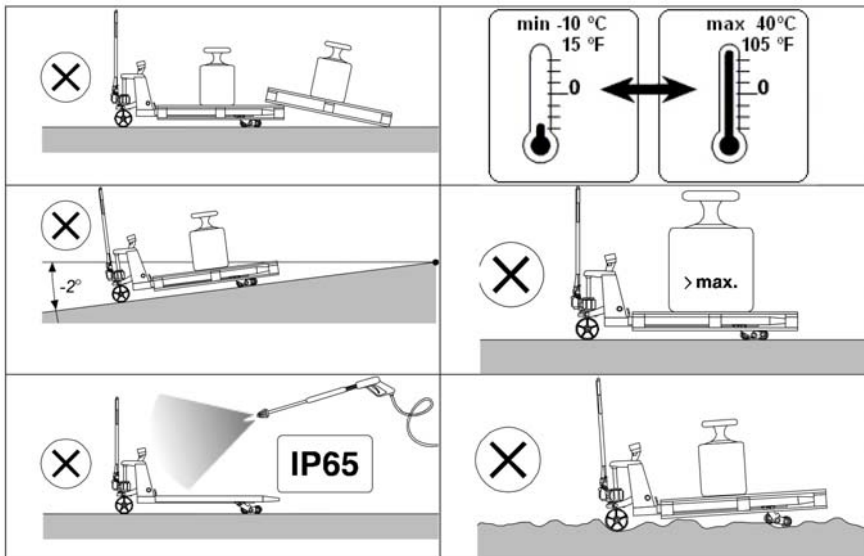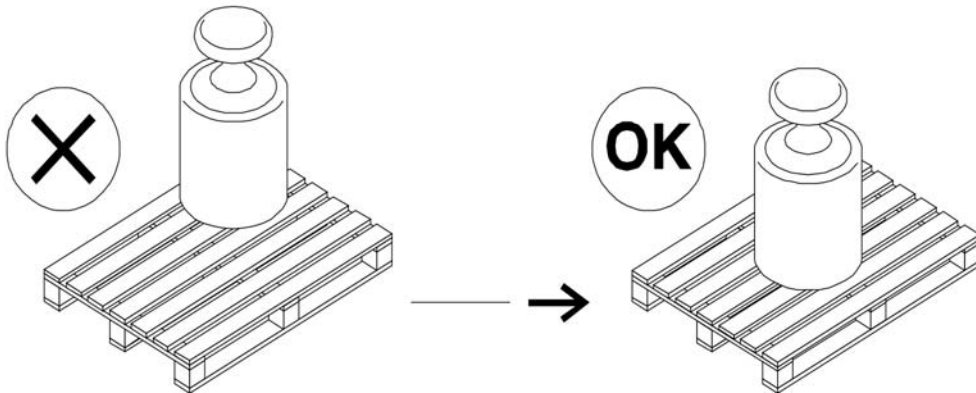

Fast temperature changes should be avoided because condensation may form in the electronics. During acclimatization the indicator must be turned off.

Taking the System into Operation

To activate the scale, turn it on using the on/off (ⓘ) button on the terminal.

After 3 to 5 minutes the electronics and load cells have reached the operational temperature. Before this, inaccuracies of up to 0.3% may occur.


It is recommended not to lift loads before the zero-point correction has been executed. (See "TROUBLESHOOTING" on page 20).

Maintenance

The maintenance guidelines for normal pallet trucks apply to the chassis of the mobile scale. The integrated scale will still function even though the chassis has been damaged by overloading.

Main guidelines:

- Because the steering wheels are mounted in the front, pulling of the pallet truck is preferred above pushing it.
- When the lifting mechanism is not used, the handle should be kept in the neutral (middle) position. This prolongs the life-span of the seals.
- The scale meets up to the protection class NEMA 4/IP65. This means that dust or moisture (rain or water beam from all sides), will not influence the operation of the electronics. However, high-pressure cleansing in combination with warm water or chemical cleansers will lead to the entry of moisture and have a negative influence on the operation of the system.
- To avoid damage to load cells and electronics, only the Authorized Service Center may undertake any welding.
- The bearings of the wheels (non-polyurethane) and the pivoting points of the leveling bar of the loading wheels must be cleansed and greased regularly.

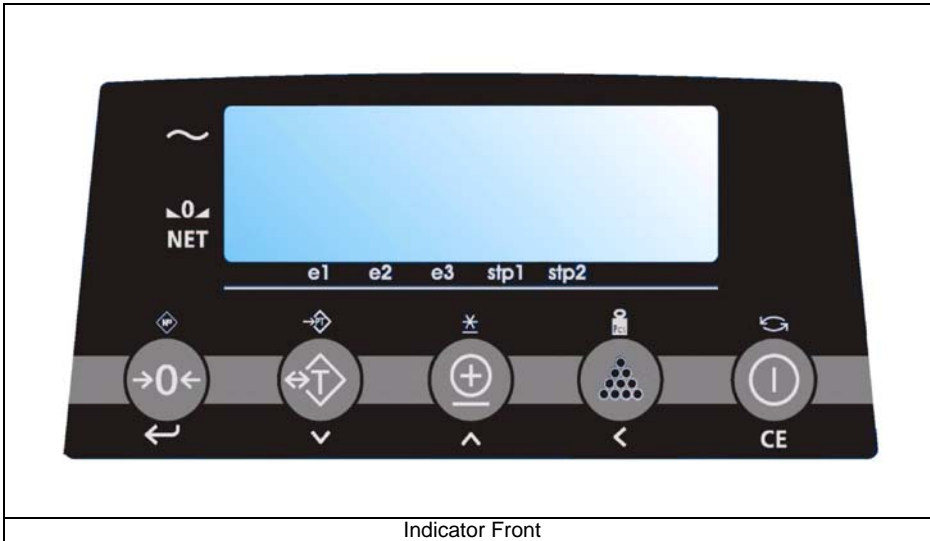









TOUCH PANEL INDICATOR

There are three display-modes: lbs, kg or the number of pieces.

Also the battery sign is integrated in the display in order to show a low battery status.


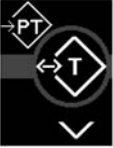



The Display

By means of eight pointer bars the display shows:


| | | |
|--|---|---|
|  |  | the scale (including load) is stable |
| |  | the weight shown is negative |
| ZERO |  | the weight shown is within the zero range |
| NET |  | the display is showing the net weight |
| e1 |  | displayed weight shown is in range 1 |
| e2 |  | displayed weight shown is in range 2 |
| e3 |  | displayed weight shown is in range 3 |
| stp1 |  | Set-point 1 is activated |
| stp2 |  | Set-point 2 is activated |

The Touch Panel

Each key has two operational and one entry function.

| Key | Function level 1 (short key press) | Function level 2 (long key press) | Function level 3 (entry mode) |
|--|---------------------------------------|--------------------------------------|--|
|  | zero setting | code entry | enter |
|  | automatic tare | pre-set tare | decrease the value of the digit flashing |
|  | print weight and add to the total | check subtotal and print total | increase the value of the digit flashing |
|  | sampling a piece weight | enter a piece weight | shift to the next digit on the left |
|  | on/off switch | Change units mode | clear entry |

IMPORTANT

Operation of a key is not accepted unless the scale is stable (and the “load stable”  pointer lights up). This means that the indicator only executes commands with a stable load.



Warning: When the weighed load surpasses the pre-set maximum, the display shows: "ERR02". In order to prevent damage to the indicator or load cells, the scale must be unloaded immediately.

Error Messages

| Displayed error | Meaning | Out of error mode |
|-----------------|--|----------------------------------|
| Err01 | Load cell signal is unstable | Automatic |
| Err02 | Overload on full scale | Automatic after removing weight |
| Err03 | Gross negative. This action is not allowed | Automatic |
| Err04 | Out of zero range | Press any key |
| Err05 | Sampling accuracy too low | Press any key |
| Err06 | Input signal too high | Automatic after correcting input |
| Err07 | Input signal too low | Automatic after correcting input |
| Err08 | Calibration out of range (negative) | Automatic |
| Err09 | Calibration out of range (signal too low) | Automatic |
| Err10 | Calibration count 2nd (3rd) point lower than count 1st (2nd) point | Automatic |
| Err14 | Set-point value 2 < set-point value 1. This is not allowed | Automatic |
| Err98 | Calibration point must be higher than previous one | Automatic |
| Err99 | Action only allowed in start-up units | Automatic |

INDICATOR FUNCTIONS

Graduation

From 0 to 5000 lbs. (0 to 2268 kg), the weight is shown in 2 lb. (0.9 kg) increments.

Before Weighing: Check Zero Point

Before each weighing, it is necessary to check whether the system is unloaded and free. The indicator is fitted with an automatic zero correction. This means that small deviations of the zero point will be corrected automatically. If the indicator does not determine the zero point automatically, it must be done manually by pressing the >0< key.

Gross Weighing

After lifting a load, the display shows the gross value of the weighed load.

Net Weighing: Automatic Tare

The indicator offers the possibility to reset tare weights to zero automatically. This way added or subtracted weights can be determined.

- Lift load.
- Press key ⇔T.
 - The indicator is set to zero.
 - The "NET" pointer shows that a tare weight is activated.
- Place or remove the net load.
 - The display shows the net value of the weighed load.
 - When load is removed, a negative weight is displayed.
- By pressing the ⇔T key again, the gross weight is displayed.

Tare Weights

A tare weight can be entered at any time, either in a loaded or unloaded situation.

Sample Tare Entry



- Pick up the empty pallet, container or item that you want to delete from the Net Weight.
 - Tap the "T" Tare Button.
 - Indicator will show "0" zero.
 - When the Weighing Hand Pallet Jack is emptied/off-loaded, indicator will show the negative Tare Weight.
 - Tare Weight will be saved until system is re-zeroed.
- To delete the Tare Weight, empty the Weighing Hand Pallet Jack and tap the "0" zero button.

Or




- Press the →PT key until the display changes and the last digit is blinking (approx 3 seconds).
- The display shows the current tare value.
- The right digit is blinking.
- Press the ^ key to go up a value or press the v key to go down a value until the required value is reached for that place.
- Press < to change to the next digit.
- Repeat this procedure until the required tare value is displayed.
- Press ENTER (↵) to activate the tare weight.
 - The tare weight is activated.
 - The "NET" pointer lights up.
 - When the system is loaded, the net value appears in the display
 - When the system is unloaded, the read-out displays the negative value of the given tare.
 - The entered value remains active until a new tare weight is entered (display shows the new net weight).
- Press the ⇔T key to return to gross weighing mode.


Piece Count: Sampling

If an unknown piece weight is to be determined, you may do this by sampling a certain number of pieces. The number of pieces taken from or placed on the scale determines the accuracy of the sampling. The total weight of the pieces taken from or placed on the scale for the sampling should be no less than 9 to 10 lbs. (4.1 to 4.5 kg). The greater the weight difference, the greater accuracy. The standard sampling amount is 10 pieces, but this number can be increased up to 95 pieces.



- Press the  key.
 - The display shows "add10". The "lb" pointer changes to "pcs".
- Take or place 10 pieces from/on the scale and press the ENTER () key.
 - The sampling is done and the display will show the total number of pieces on the scale.

Or





- Press the  key or the  key to change the number of pieces to add.
 - The display will show the new value to add. (For example "add 50").
- Take or place 50 pieces from/on the scale and press the ENTER () key.
 - The sampling is done and the display will show the total number of pieces on the scale.

To return to the normal weighing mode, press the  key for 3 seconds.

Piece Count: Enter a Piece Weight

- Press the  key for 3 seconds.
 - The last used piece weight will be displayed with the right digit flashing.
- To accept the old value press ENTER () key.
 - The display shows the number of pieces currently on the scale.

Or

- Change the piece weight value by using the  or  and  keys.
 - The display shows the new piece weight.
- To accept the new value press ENTER () key.
 - The display shows the number of pieces currently on the scale.

To return to the normal weigh mode, press the  key.

Summing

The indicator offers the possibility to add weighings and show the total weight. When a tare weight is active, the net weight is added automatically.

- Load the system with the weight that should be added.
- Press the ⊕ key to add the weighed load to the total weight.
 - The display shows the message “ADDED” and after a short delay returns to the weighing mode.

NOTE: Note that no weight can be recorded twice. The system needs to be returned to the net zero-range before another weight can be added up.

The subtotal can be checked by pressing the * key for 3 seconds.

- The display shows the net total weight and the number of weights totaled so far repeatedly for 3 seconds.
 - If the ⊕ key is pressed during this period, the total is printed out (if option is installed) and reset to 0.
 - If the “CE” key is pressed during this period, the total is reset but not printed out.
 - If no key is pressed during this period, the subtotal stays in memory and the system returns to the weighing mode after 60 seconds.

Change Units

The system is set to start up in ‘lbs.’ or in ‘kg’. However you may, at any time in the weighing mode, change to the second unit (lb. ↔ kg or kg ↔ lb.).

- Press the ↻ key for 3 seconds.
 - The display will show the current weight in the new units for 5 seconds and then automatically change back to the start up units.

NOTE: The same key is used to change from the piece counting mode back to the weighing mode.

PRINTER (OPTION)





The Model LFTSC may be equipped with a thermal printer. Obtained and entered weighing data can be printed.

The Print Out

In the printout, a gross weight is indicated with the letters "B/G" and a net weight with the letter "N". A manually entered tare weight will also be printed and is indicated with the letters "PT". The total weight is shown with the letters "TOT".

| Standard print-out without code | | Standard print-out with code | |
|---------------------------------------|-----------------------|---------------------------------|-----------------------|
| B/G | 1234.5 lb. (560 kg) | CODE | 12345 |
| T | 34.5 lb. (15.6 kg) | B/G | 1234.5 lb. (560 kg) |
| N | 1200.0 lb. (544.3 kg) | T | 34.5 lb. (15.6 kg) |
| Nr. | 1 | N | 1200.0 lb. (544.3 kg) |
| 10/07/03 | 17:45 | Nr. | 1 |
| | | 10/07/03 | 17:45 |
| Piece count print-out without code | | Piece count print-out with code | |
| B/G | 1234.5 lb. (560 kg) | CODE | 12345 |
| T | 34.5 lb. (15.6 kg) | B/G | 1234.5 lb. (560 kg) |
| N | 1200.0 lb. (544.3 kg) | T | 34.5 lb. (15.6 kg) |
| PcWt | 1.234 lb. (0.5 kg) | N | 1200.0 lb. (544.3 kg) |
| Qty | 12345 PCs | PcWt | 1.234 lb. (0.5 kg) |
| Nr. | 1 | Qty | 12345 PCs |
| 10/07/03 | 17:45 | Nr. | 1 |
| | | 10/07/03 | 17:45 |
| Total print-out (always without code) | | | |
| Tot. B/G | 1234.5 lb. (560 kg) | | |
| Tot. T | 34.5 lb. (15.6 kg) | | |
| Tot. N | 1200.0 lb. (544.3 kg) | | |
| Tot. Nr. | 999 | | |
| 10/07/03 | 17:45 | | |

Changing the Thermal Paper Roll
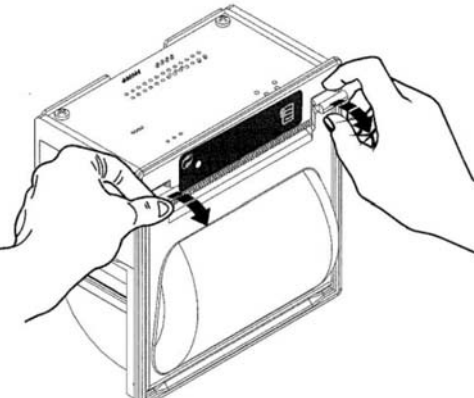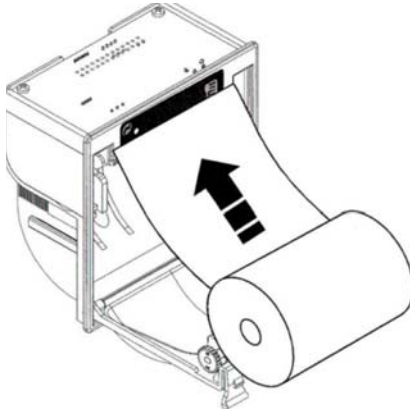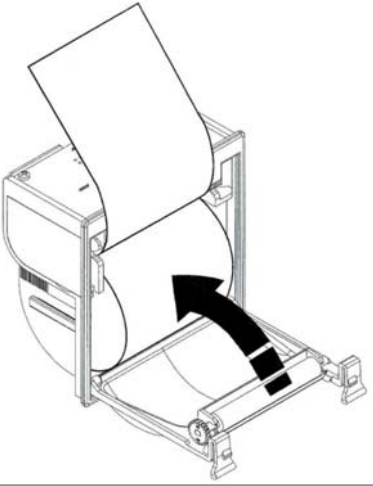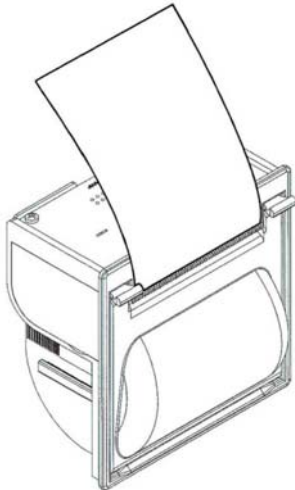
| | |
|---|---|
|  |  |
| <p>1. Open the printer cover by pressing down the two levers and pulling the cover towards you.</p> | <p>2. Remove the existing paper roll. Position the new paper roll, making sure it unrolls in the correct direction, as shown above.</p> |
|  |  |
| <p>3. Unroll the paper slightly. Re-close the cover, holding the edge of the paper.</p> | <p>4. The printer is now ready for use.</p> |

Changing the Time and Date on the Print-out

The date and time can be printed together with the weight information.

- Press the \clubsuit key for 6 seconds.
 - The display will show "ho_00" or the previous hour time setting, with the right digit flashing.
- To accept the old value press ENTER (\leftarrow).

Or

- Press the \wedge key to go up a value or press the \vee key to go down a value until the required value is reached.
- Press \leftarrow to change to the next digit and use the \wedge or \vee key to change the value until the required value is reached.
- To accept the new value press ENTER (\leftarrow).
 - The display will show "m_00" or the previous minute time setting, with the right digit flashing.
- Repeat the above procedure to accept or change the minute setting.
 - The display will show "dA_00" or the previous date of the month setting, with the right digit flashing.
- Repeat the above procedure to accept or change the date of the month setting.
 - The display will show "m_00" or the previous month setting, with the right digit flashing.
- Repeat the above procedure to accept or change the month setting.
 - The display will show "YE_00" or the previous year setting, with the right digit flashing.
- Repeat the above procedure to accept or change the year setting.
- The indicator will return to normal weighing mode.

TROUBLESHOOTING

Use the troubleshooting procedures shown in the following table as a guide only.

| CONDITION | POSSIBLE CAUSE | ACTION | |
|----------------|--|--|--|
| Hydraulic pump | Pump does not lift the load. | An air lock in the hydraulic system. | Pull up on the fingertip control and hold while pumping the handle 8 to 10 times to bleed air from the system. |
| | Lifting, neutral, and lowering do not function properly. | Chain anchor is out of adjustment. | Turn the nut on the chain anchor clockwise until the pumping action, while in neutral, does not raise the forks. |
| | Forks raise and sink with pump action. | Dirt or foreign particle is caught in the cone valve seat. | Pull up on the fingertip control and hold while pumping the handle 8 to 10 times to purge the valve system. |
| No power | Change batteries | Replace battery pack. | Use a fully charged battery pack. (See "The Battery" on page 6.) |
| | 12Vdc on the board | Check the board for burned components. | |


| CONDITION | POSSIBLE CAUSE | ACTION | |
|-----------|------------------|--|--|
| Accuracy | No repeatability | Check if there is a mechanical problem. | Load left and right fork with, for example, body weight and see if weight changes when you are in different positions on the scale. There should not be a difference larger than 2 lb. (0.9 kg). If there is a bigger difference than 5 lb. (2.3 kg), you have a load cell or a mechanical problem. |
| | | | To make sure it is a mechanical problem, repeat test with a heavy load on the scale. Lift a pallet with 2000 or 3000 lbs. (907 to 1361 kg). Reset indicator for 0 lb. using the tare function. Load corners with body weight by standing on, or on the sides of the pallet. If readings change more than 5 lb. (2.3 kg) you have a mechanical problem. |
| | | | The push rods in the forks may not interfere with the load cells. Take off the fork shoe by unscrewing the nuts on the bottom side of the pallet truck. Push the push rods sideways towards the load cells to see if they come in contact with the load cells: see if they can interfere with the load cells. |
| | | | With the forks lifted half way up, the brackets for the loading wheels may touch the fork shoe. By taking off the fork shoe, scratches will show if it does and where it does. |
| | | | Check if bolts are loose. |
| | | Check the load cells. If one is broken or gives more or less signal than the others, the scale will give different reading depending how it is loaded. | To be sure that it is not a mechanical problem, load the load cells directly. Take off the fork cover. Try to apply weight 55 to 110 lbs. (25 to 50 kg) direct onto each load cell. If the indicator shows the same reading, the load cells are OK. |
| | | | Tap with a hammer onto the load cells. Do not be afraid to break it. Repeat the test for each load cell. |
| | | | Measure resistance with ohm meter between wires and load cell body. Do this with the other load cells disconnected from indicator. No resistance is allowed. |
| | | | The load cells should have +/- 350 ohm between the signal wires: yellow and green, and excitation wires, black and red. |

| CONDITION | POSSIBLE CAUSE | ACTION | |
|-----------------------|-------------------------------|--|--|
| Accuracy (Cont'd.) | No repeatability (Cont'd.) | | Bad connections will cause changes when moving the scale. |
| | | Check cables. | Bend and move the cable briskly, especially where the cable is moving continuously while lifting. While doing so, look at the display to see if it reacts to the movements. |
| | | The potentiometers with which we calibrate the output of the load cells are mechanical parts; therefore, higher risk components. | Move the board and put pressure with fingers on the potentiometers while looking at the display to see if it reacts. Do not touchcontact. |
| | Not linear | Check if it is load cells or indicator. | Load cells or indicators are very rarely the cause of this problem. Easiest way to check is by changing the indicator temporarily. If problem is not solved when changing the indicator, the problem is the load cell, cable or mechanics. |
| | | Check cable. | Very rarely the cause. Maybe in a lift truck. |

| CONDITION | POSSIBLE CAUSE | ACTION | |
|-------------|---|--|---|
| Instability | With no load, it is most of the time humidity, bad connection or component or bad shield. | Check for humidity. | Check for water marks on the indicator board or load cell connections (potentiometers). |
| | | Check the indicator. | Sometimes the indicator will show a weight when the load cells are disconnected. If you do this and the indicator becomes more stable, it is most likely elsewhere in the system. |
| | | | Check visually for traces of oxidation. If found, heating the solder contacts can solve the problem. |
| | | Check cables. In warehouse and lift truck the cable is working all the time when following the lifting movement. It may be worn or damaged. Changing temperatures and chemicals have an effect on the lifetime of a cable. | Bad connections will cause changes when moving the scale. |
| | | | Bend and move the cable briskly especially where the cable is moving continuously when lifting. While doing so, look at the display to see if it reacts to the movements. |
| | | The potentiometers with which we calibrate the output of the load cells are mechanical parts and are sensitive to humidity, shocks and vibration. | Move the board and put pressure with fingers on the potentiometers while looking at the display to see if it reacts. Do not touch contact. |
| | Check the load cells. | If connected independently to the indicator, it can be checked which one is unstable and which one is not. | |
| With load | Check mechanics. | | |

| CONDITION | POSSIBLE CAUSE | ACTION | |
|----------------|-------------------------------|---------------------------------------|--|
| Function error | No reaction when pushing keys | Check the touch panel. | Test can be done by making short cut on connection of the touch panel to simulate a key being pressed. Check for wear or broken contacts in the flat cable going to the indicator board. |
| | | Lock up. | Take out the battery pack and replace to see if it starts up afterwards. |
| | Not summing | Operator error. | Load is not stable. Scale needs to be unloaded before accepting new print. System will not print weights that are smaller than the graduation. |
| HELP messages | HELP 2 | Scale is overloaded. | Take load from scale. If there is no load, do the same checks as you do with HELP 3 and 7. |
| | Help 3 or 7 | Load cell signal too high or too low. | Check cables for damage. Move the cable while looking at display to see if indicator reacts. |
| | | | Measure load cells to see if they are fine. |
| | Help 4 | Out of zero range. | Zero calibration needed. |

SPARE PARTS EXPLODED VIEW

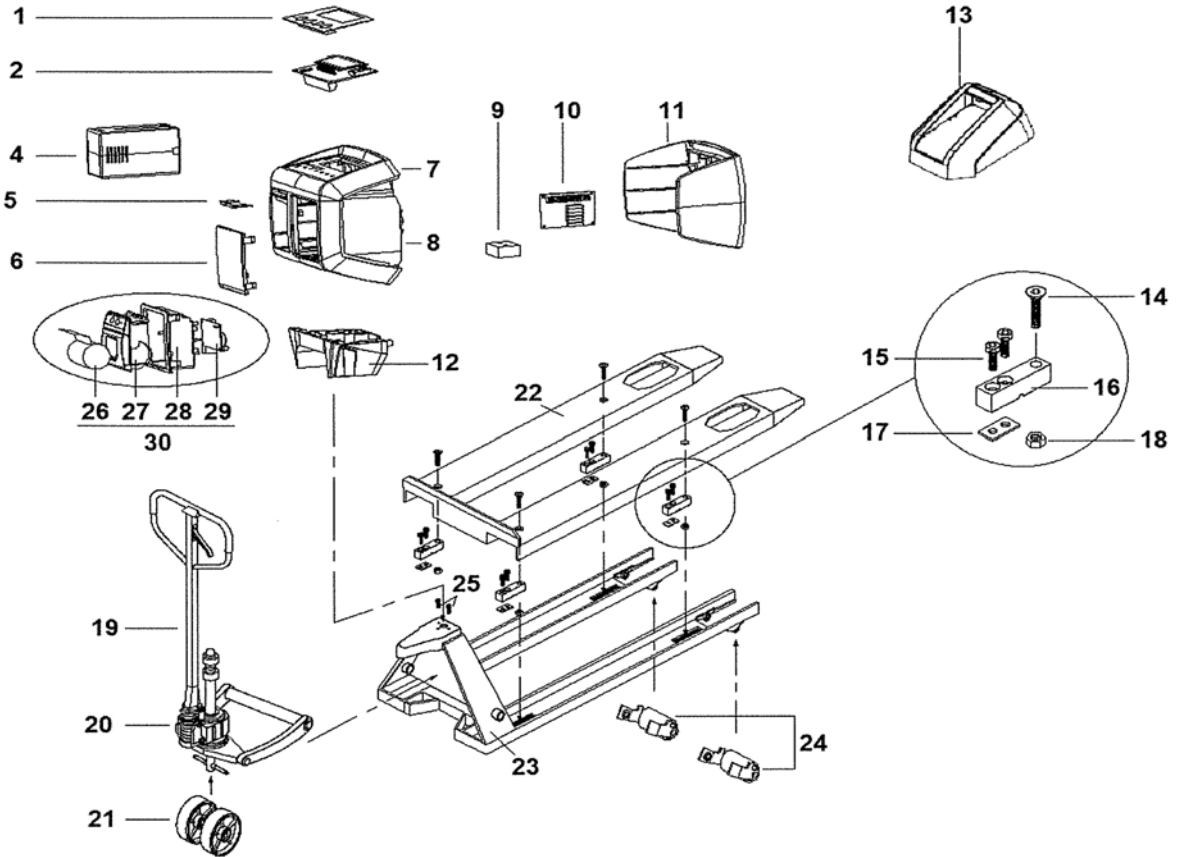

SPARE PARTS LIST – Weighing Hand Pallet Truck Model LFTSC

| No | Part Number | Description | Quantity |
|----|-------------|---|----------|
| 1 | 990-1186 | Panel, Touch Indicator | 1 |
| 2 | 990-1187 | Indicator, Print Board | 1 |
| 4 | 990-1188 | Battery Module 12 V 1.2 Ah with Handle | 1 |
| 5 | 990-1189 | Battery Module Fixation Clip | 1 |
| 6 | 990-1190 | Cover Plate Printer | 1 |
| 7 | 990-1191 | Indicator Housing, Top Cover | 1 |
| 8 | 990-1192 | Indicator Housing, Main Housing, RAL 5002 | 1 |
| 9 | 990-1170 | Switch, Level | 1 |
| 10 | 990-1193 | Load Cell Calibration Board | 1 |
| 11 | 990-1194 | Indicator Housing, Back Cover, RAL 1028 | 1 |
| 12 | 990-1195 | Indicator Housing, Pedestal | 1 |
| 13 | 990-1196 | Battery Charger | 1 |
| 14 | 990-1155 | Bolt, Forkshoe Mounting M12 x 60 | 1 |
| 15 | 990-1154 | Bolt, Load Cell Mounting M12 x 35 | 2 |
| 16 | 990-1152 | Load Cell | 1 |
| 17 | 990-1153 | Plate, Load Cell Mounting 6 MM | 1 |
| 18 | 990-1156 | Nut, Forkshoe Mounting | 1 |
| 19 | 990-1157 | Handle (Black) | 1 |
| 20 | 990-1158 | Pump (Black) | 1 |
| 21 | 990-1160 | Wheel, Steering Polyurethane | 2 |
| 22 | 990-1150 | Forkshoes, Set | 1 |
| 23 | 990-1151 | Chassis | 1 |
| 24 | 990-1161 | Wheel, Load (Polyurethane) | 2 |

| No | Part Number | Description | Quantity |
|----|-------------|----------------------------------|----------|
| 25 | 990-1162 | Bolt, Indicator Support Mounting | 2 |
| 26 | 990-1197 | Paper, Single | 1 |
| 27 | 990-1198 | Printer, APS Thermal | 1 |
| 28 | 990-1199 | Printer, Mounting Part | 1 |
| 29 | 990-1200 | Voltage Regulator | 1 |
| 30 | 990-1201 | Printer Complete | 1 |

CALIBRATION

Calibration Instructions Indicator

The calibration mode can only be reached from the standard weighing mode. You cannot get into the calibration mode when you are in piece count mode.

Defining Zero

- Unload the system.
- Switch the system on.
- To enter the zero calibration mode, press the >0< key for 10 seconds.
 - After 3 seconds the display will show the last entered code.
 - After 7 seconds the display will go into the zero calibration mode and start adjusting.
 - The display will show "Adj08" and run down until "Adj00". The adjustment has been completed.
 - The indicator shows the percentage of the total capacity that was adjusted. For a normal scale, this would be between 5 and 8 percent. A larger percentage could mean one or more load cells are broken. A lower percentage could mean the fork cover is not mounted.
 - The zero point has been defined, the system automatically returns to the standard weighing mode.

Single Point Calibration

- Press the ⇔T key for about 10 seconds.
 - After 3 seconds the display will show the last entered pre-set tare value.
 - After 7 seconds the display will go into calibration mode.
 - The display will show the first calibration point with the pointer "e1" flashing.
- Using the ^ and v keys you can see the three earlier programmed values on the display.
 - The pointer will move through e1-3. "e1" is the first calibration point, "e2" the second and "e3" the third.

When calibrating only one point the second and third values should be set to zero.

- Use the ^ and v keys to move to the second calibration point.
 - The display will show the pointer "e2" flashing.
- Press the ← key.
 - The display will show the previously entered calibration value, with the last segment flashing.
- Use the ^, v and < keys to return all the segments to zero.
- Press the ← key.
- Use the ^ and v keys to move to the third calibration point.
- Repeat the above to set all the segments to zero.
- Press the ← key.

Calibrating the single point

- Use the \wedge and \vee keys to return to the first point.
 - The indicator shows the value of the first calibration point, with the “e1” pointer flashing.
- Load the scale with a known weight.
- Press the \leftarrow key to enter this weight onto the indicator, the first segment starts flashing.
- Use the \wedge and \vee keys to change all the segments until the proper weight has been entered.
- Press the \leftarrow key to return to calibration mode. The “e1” pointer will start flashing.
- Press the \leftarrow key for 3 seconds to confirm the entered weight.
 - This calibration number counts down from Adj 08 to Adj 00, the first calibration point has now been set.
- Leave the calibration mode by pressing the \wedge or \vee key until AP XX appears. This number indicates the calibration sensitivity percentage, for example, AP 07.
- Press the \leftarrow key.
 - The display now shows the value of the gravitation constant. Use the \wedge , \vee and $<$ keys to correct this for your position.
- Press the \leftarrow key to return to the standard weighing mode.

Multi-Point Calibration

- Push the ⇔T key for about 10 seconds.
 - After 3 seconds the display will show the last entered pre-set tare value.
 - After 7 seconds the display will go into the calibration mode.
 - The display will show the first calibration point with the pointer “e1” flashing.
- Using the ^ and v keys you can see the three earlier programmed values on the display. The pointer will move through e1-3. “e1” is the first calibration point, “e2” the second and “e3” the third.
- Use the ^ and v keys to return to the first point.
 - The indicator shows the value of the first calibration point, with the “e1” pointer flashing.
- Load the weighing system with a known weight.
- Press the ← key to enter this weight onto the indicator.
 - The first segment will start flashing.
- Use the ^, v and < keys to change all segments until the proper weight has been entered.
- Press the ← key to return to calibration mode.
 - The “e1” pointer will start flashing.
- Press the ← key for 3 seconds to confirm the entered weight.
 - This calibration number counts down from Adj 08 to Adj 00, the first calibration point has now been set.
- Move to the second calibration point.
 - The display will show the pointer “e2” flashing.
- Repeat the procedure for a second known weight. Be aware that the value of this weight has to be higher than that of the first weight. If not, the display will show ERR98 and return to the entry mode for the calibration point.
- Repeat the procedure for the third known weight. Leave calibration mode by pressing the ^ or v key until AP XX appears.
 - This number indicates the calibration sensitivity percentage, for example, AP 07.
- Press the ← key.
 - The display now shows the value of the gravitation constant. Use the ^, v and < keys to correct this for your position.
- Press the ← key to return to the standard weighing mode.

PARAMETER SETTINGS



ATTENTION: Before entering the setup mode, make sure that the battery supply is sufficient. A low battery may cause the micro-processor to block. If this happens remove the empty battery and replace it with a fully charged battery. You should be able to start the indicator in the normal way.

To enter the setup mode, turn on the indicator and keep the \odot key pressed for 20 seconds. You will go through the normal start-up routine (all segments on; software version; calibration number and weight) and end up in the "P_01" with the right digit flashing.

At this stage you may proceed as follows:

- To enter parameter 01 press the \leftarrow key quickly.
 - The display will show the setting for this parameter at this moment.
- You may change the setting by using the \wedge or the \vee key.

OR

- You can accept the setting by pressing \leftarrow .

OR

- To move to the next parameter you press the \wedge key.

OR

- To move to the previous parameter you press the \vee key.

- To leave the set-up mode, you do the following:
- With P_XX in the display, press the \odot key quickly.
 - The display will show "P_00".
- Press the \odot key again quickly.
 - If a change was made to the settings, the display will show "SET_" briefly and then return to the normal weighing mode. The calibration number will be increased by every time a change was made in the set up and also after a new calibration.
 - If no change was made, the display will return into the normal weighing mode.

In the following pages the different parameters are explained and the standard settings are given. Parameters that are not used yet will not be accessible or displayed with underscores.

PARAMETERS:

| Parameter | Function | Settings | Default US |
|-----------|--|---|------------|
| 01 | Start-up unit (and print units) | 1=kg / 2=lb. | 2 |
| 02 | Smallest graduation step for multi-range | 0.1/0.2/0.5.....10/20/50 | 0.5 |
| 03 | Largest graduation step for multi-range | 0.1/0.2/0.5 10/20/50 | 2 |
| 04 | Number of graduations for every range | 0000-9900 divisions | 1000 |
| 05 | Weighing capacity system (full scale) | 0000-99999 units | 5000 |
| 06 | Motion tolerance for stable | 0-32 | 1 |
| | | off 0.5 grad./sec | |
| | | 1 grad./sec 2 grad./sec | |
| | | 4 grad./sec 8 grad./sec | |
| | | 16 grad./sec 32 grad./sec | |
| 07 | Filter size | 0-12 | 8 |
| | | 0=off | |
| | | 1=light filtering, 12=heavy filtering | |
| 08 | Auto zero range | 0=off 0.5 division | 0.5 |
| | | 1=division 3 divisions | |
| 09 | Zero range positive (+) | 0-100% (approved 2%) of span | 10 |
| 10 | Zero range negative (-) | 0-100% (approved 2%) of span | 10 |
| 11 | Test Function | BASIC ADC Counts | BASIC |
| | | 10x Resolution | |
| 12 | Not used | | |
| 13 | Not used | | |
| 14 | Start-up number to add in sampling mode | 1-2-5-10-20-50-95 | 10 |
| 15 | Units switch mode active | Yes / No | Yes |

| Parameter | Function | Settings | Default US |
|-----------|-------------------------------|---|------------|
| 16 | Setpoint function | 0-4 | 0 |
| | | 0=not used | |
| | | 1=overload gross (only 1 setpoint used) | |
| | | 2=overload gross (only 1 setpoint used) | |
| | | 3=Printer (without date/time/switched supply) | |
| | | 4=not used | |
| 17 | Application | Basic (standard) or Peakhold (Phold) | BASIC |
| 18 | Gravity value working area | 9.750-9.850 | 9.797 |
| 19 | Key function | Remote - Local - Both | Local |
| 20 | Baudrate comport 1 | 600-1200-2400-4800-9600-19200 | 9600 |
| 21 | Databits comport 1 | 7-8 | 8 |
| 22 | Parity comport 1 | none/odd/even | none |
| 23 | Stopbits comport 1 | 1-2 | 1 |
| 24 | Not used | | |
| 25 | Dataprotocol comport 1 | 0-4 | 0 |
| | | 0=PC bi-directional command structure | |
| | | 1=not used | |
| | | 2=Remote display continuously | |
| | | 3=Printer (without date/time/switched supply) | |
| | | 4=not used | |
| 26 | Number of linefeeds comport 1 | 0-9 | 0 |
| 27-29 | Not used | | |
| 30 | Baudrate comport 2 | 600-1200-2400-4800-9600-19200 | 9600 |
| 31 | Databits comport 2 | 7-8 | 8 |
| 32 | Parity comport 2 | none/odd/even | none |
| 33 | Stopbits comport 2 | 1-2 | 1 |
| 34 | Not used | | |
| 35 | Dataprotocol comport 2 | 0-4 | 3 |
| | | 0=PC bi-directional command structure | |
| | | 1=not used | |
| | | 2=Remote display continuously | |
| | | 3=Printer (without date/time/switched supply) | |
| | | 4=not used | |

| Parameter | Function | Settings | Default US |
|------------------|--|--|-------------------|
| 36 | Number of linefeeds comport 2 | 0-9 | 5 |
| 37 | Printout form | 0-1 | 0 |
| | | 0=standard 1=total | |
| 38 | Printout format time/date | European format dd/mm/yy hh:mm | USA |
| | | USA format mm/dd/yy hh:mm | |
| 39 | Not used | | |
| 40 | Level switch | 0=not used 1=N.C. 2=N.O. | 0 |
| 41 | Delay trigger time level switch | 0-10 sec. | 3 |
| 42 | Not used | | |
| 43-49 | Not used | | |
| 50 | Battery used | 12VDC 6 VDC | 12v |
| 51 | Low Bat switch off time | 0-99 mins | 2 |
| | | 0=not switched off | |
| 52 | Auto shut off time if not used | 0-99 mins | 15 |
| | | 0= always on | |
| 53 | Not used | | |
| 54 | Peak hold time | 0-7 | 4 |
| 55 | threshold value | 9999kg/lb | 200 |
| 56-89 | Not used | | |
| 90 | Reset to default parameter setting without altering calibration parameters | If parameter 01 was on 1 it will default to the EU settings. If P_01 =2 the US settings will be defaulted. New delivered boards will have EU settings. | |
| 91 | Reset to default parameter settings including calibration parameters | If parameter 01 was on 1 it will default to the EU settings. If P_01 =2 the US settings will be defaulted. New delivered boards will have EU settings. | |
| 92-99 | Not used | | |

LIFT-RITE® LEGAL FOR TRADE SCALE TRUCK (LFTSC) WARRANTY CERTIFICATE

Your new *Lift -Rite* LFTSC is warranted against defects in materials and workmanship as follows:

One (1) Year parts only warranty from date of delivery on all Non-wearable parts.

Six (6) Months parts only warranty from date of delivery on all Wearable parts.

Wheels and tires
Bearings
Fuses
Batteries

Components found to be defective by the product manufacturer or an authorized *LIFT-RITE* Dealer will be replaced or repaired. Replaced or repaired components will be warranted for the balance of the applicable truck warranty period, or 30 days, whichever is longer. Freight charges incurred for parts involved in the replacement or repair of a defective component will be covered up to \$120 (US). Labor charges may be reimbursed up to \$60 (US) per unit, per repair, at the sole discretion of the manufacturer. Transportation of the product to and from a *LIFT-RITE* authorized dealer, local taxes, and customs charges, if any, are excluded.

This warranty does not apply to the following:

Any attachments purchased for use with this truck.

LIFT-RITE reserves the right to make changes and improvements in design without making changes to previously manufactured products of the same description.

Notwithstanding any other language contained herein, this warranty is expressly voided without any further notice if any modification is made to the *LIFT-RITE* product, or if additional components or devices are added to the *LIFT-RITE* product, without prior approval having been granted in writing by *LIFT-RITE*.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY. THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. In no event shall LIFT-RITE be liable for incidental, special, or consequential damages.

LIFTRITE®